

Isolated simultaneous 8 channel Data logger


midi LOGGER GL980 NEW

- 8ch High speed simultaneous sampling
- Includes 500 V measurement with 16-bit A/D converter
- Equipped with true-rms measurement
- Large built-in RAM (4 M sampling/ch) and built-in Flash memory (4 GB)
- Large easy-to-read 7-inch LCD

Contributed interior cross from the contributed in the contributed in

Typical applications


Measurement of control device

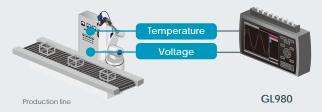

Measurement as an XY recorder



Measurement for testing washer and dryer

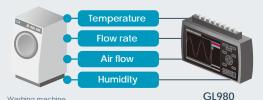


Measurement for brake components testing



High speed 1 MS/s simultaneous sampling with isolated input

GL980 is equipped with an isolated input mechanism to protect signals from interferences caused by noise from other channels. 16-bit A/D converter adopted to achieve hi-speed and hi-resolution measurement.

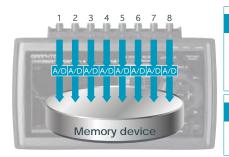

Simultaneous sampling

Sampling interval: 1 µs to 1 min (in steps of 1, 2, 5)

GL980 utilizes simultaneous sampling to eliminate slowdown in sampling rate by using multiple A/D converters in simultaneous sampling method.

Eight individual A/D converters in each channel sustains the maximum sampling speed for all eight channels to measure high speed rapid voltage fluctuation and multi-channel vibration measurement.

External sampling function Maximum input frequency: 100 kHz

Sampling of the logger is performed in sync with an external device using an external signal input.

なか

** ** **

* B-513 Input/Output cable for GL is required.

Multifunction input

Voltage, temperature, humidity, logic and pulse measurements can all be taken simultaneously in high speed.

Pulse/Logic

Pulse: 4ch (Instant, Accumulating, RPM)

Logic: 4ch

* Select either Pulse or Logic. * Required input/output cable for GL (B-513 option).

Screw terminal (size M3.5)

Thermocouple: K, J, E, T, R, S, B, N, W(WRe5-26)

Humidity : 0 to 100 % * Required humidity sensor (B-530 option).

Isolated BNC connector 500 V DC & 250 V True-rms Voltage (DC) : 20 mV to 500 V, 1-5 V Voltage (RMS): 10 mV to 250 V rms

- * Connection can be made individually to BNC or screw terminal. BNC and screw terminal are connected to the same channel.
- Measure repetitive waveforms such as vibration with instantaneous value and effective value.

Measures either instantaneous value or effective value (RMS). By utilizing the trigger feature to measure abnormal spikes in the continuous waveform, users can measure vibration abnormalities repeatedly.

- Measures abnormalities in a repeated waveform by effectively measuring the corresponding RMS value.
 - All RMS measurement range with Crest Factor: up to 2


TE BE TE

ы.




Scaling (Engineering unit) function

Measured voltage value can be converted to a specified engineering unit. The value can be displayed with the physical measurement value of the sensor and be saved into the data file with the converted values.

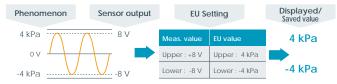

Trigger function

The trigger in this unit has multiple functions including level trigger of

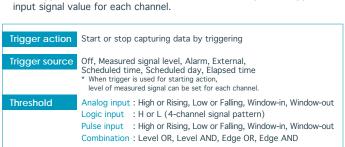

Instantaneous value meas RMS (effective value) meas. 500V 250Vrms 283V

Calculation function between channels


Four arithmetic operations (Addition, subtraction, multiplication and division) are available using two analog input channels.

* Data can be saved only in GBD file format



Alarm function & signal output

Threshold of an alarm can be set for each channel. When an alarm occurs, notification is sent by following methods.

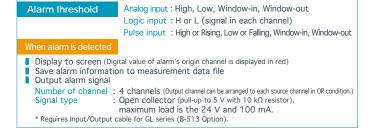


Large Easy-to-read 7-inch LCD

Monitor data in multiple methods in addition to digital value display and full waveform display screen.

Y-T waveform monitor screen

Displays data with analog waveform and digital value. Screen can also be split into 1, 2, 4 or 8 zones to display the channels in different zones.

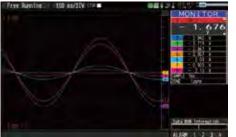


Digital monitor screen

Displays current data in digital value and results of real time statistical calculation. (Function: Maximum, Minimum, Peak-to-peak, and Average)
When displays only current data, it can be shown in 1, 2, 4 or 8 zones.



Past waveform monitor screen

Display the past part of the data while capturing data. Execute without stopping measurement and also scroll past data. Data screen can be switched with past and current.

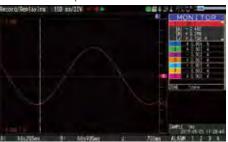

XY graph monitor screen

Emulates the classic XY chart recorder. Also supports features for pen up/down and position movement.





Quick and Easy Set Up Process

Simple operation with cursor and enter keys, and menu-driven operation with six pre-set menu screens: AMP, DATA, DISP, TRIG, I/F (Interface) and OTHER.

Cursor keys

Move between items on the setting screen and move the cursor on the waveform screen.

ENTER key

Determine the item and value selected with the menu.

FUNCTION (FUNC) key

Execute the specified function with this shortcut button. Frequently used function can be preset.



Free-running function

The input signal being captured in real time can be monitored on the measurement or setting screen even if recording has not initiated. The measurement voltage range can be set while watching the waveform.



Other helpful functions

Delivers reliable measurements out at a location with unstable power supply.

Equipped with three types of options for power source, AC adapter, DC input, and battery pack. With a battery pack, GL980 runs continuously for approximately 2 hours. If an AC power failure occurs, it will automatically switch from the AC adapter to the battery pack. Additionally, when the voltage of the battery pack reaches low, measurement is automatically stopped after saving the data file preserving the accumulated data. (Requires two battery packs (B-569 option) installed.)

Instrument is in compliance with JIS Vibration Test Method for Automobile Type 1 Class A. (Vibration durability test: 5 m/s²)

Carrying case (B-581)

Portable case to store GL980 and signal input cables for easy handling.

coming soon

Cover (B-579)

Protect the main body from cosmetic damages and minor impacts. GL980 is shipped with cover attached.



* The cover is not to protect from hard impact.

Supports large built-in RAM (4MS/ch) and built-in Flash (4 GB)

Long term recording is made possible with 4 M samples/ch built-in RAM and 4 GB built-in Flash memory. It supports both USB Flash memory and SD Card memory to be used as external storage devices for recorded data for certain sampling intervals.

External storage **USB** memory slot RAM Flash memory External storage SD Card slot

Approximate recording time

■ 8 channels of analog input. ■ Data is saved as a GBD file.


Memory type	Data capacity	1MS/s(1μs)	100kS/s(10μs)	1kS/s(1ms)	1S/s(1s)
Built-in RAM	4 M samples/ch	4 seconds	40 seconds	66 minutes	46 days
Built-in Flash memory	3.9 GB	N/A	N/A	2 days 6 hrs.	Over 1 year
External memory (SD/USB Flash memory)*	4 GB	N/A	N/A	2 days 11 hrs.	Over 1 year

■ 8 channels of analog input with 4 channels of Pulse input. ■ Data is saved as a GBD file.

Memory type	Data capacity	1MS/s(1μs)	100kS/s(10μs)	1kS/s(1ms)	1S/s(1s)
Built-in RAM	4 M samples/ch	4 seconds	40 seconds	66 minutes	46 days
Built-in Flash memory	3.9 GB	N/A	N/A	1 days 4 hrs.	Over 1 year
External memory (SD/USB Flash memory)*	4 GB	N/A	N/A	1 days 7 hrs.	Over 1 year

^{*} When using 8 GB or larger memory, the size of data file will be up to 4 GB. The Relay mode enables extended recording time.

Convenient Data Recording Functions

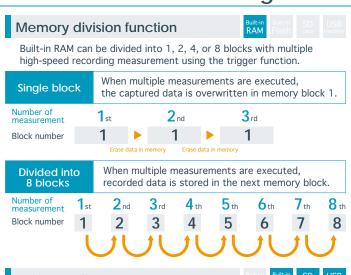


Ring mode



Number of capturing data

1000 to 10000000 data

* When using built-in RAM, 10 to 4000000 data

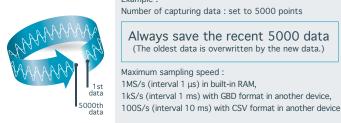

Example: Number of capturing data : set to 5000 points

Saves most recent data of specified number after recording stops.


Always save the recent 5000 data (The oldest data is overwritten by the new data.)

Maximum sampling speed: 1MS/s (interval 1 μ s) in built-in RAM, 1kS/s (interval 1 ms) with GBD format in another device,

Relay mode



Save data to multiple files with specified capturing time or file size (up to 4 GB) until recording data is stopped.

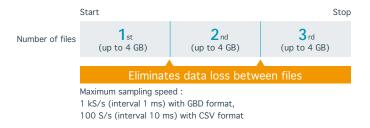


Save & replay data in CSV format





Captured data can be saved with GBD (binary) and CSV (text) format. CSV format file can be played on GL980 and opened with spreadsheet software.

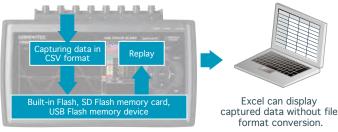

Maximum sampling speed:

1 kS/s (interval 1 ms) with GBD format,

100 S/s (interval 10 ms) with CSV format

Data backup and hot swaps









The recorded data can automatically save to other storage device at specified regular intervals during data capture. (Maximum sampling speed: 1 kS/s (interval 1 ms) with GBD format, 100 S/s (interval 10 ms) with CSV format)

When the backup destination is set to a SD Flash memory card or a USB Flash memory device, memory device can be exchanged before the memory capacity becomes full using the key operation.

Auto save function

Recorded data saved in a built-in RAM is automatically copied as data file to a built-in Flash memory, SD Flash memory card or USB Flash memory with auto save function. An SD Flash memory card or a USB Flash memory can be used as a backup location when using the built-in RAM. The process will prevent losing any data captured in the built-in RAM by any overwrite or power cycles.

Search function

The search function can locate a specific value within the captured data as well as finding abnormal values within data of a long-recorded file.

Search for analog signal levels, logic signal pattern, pulse signal levels or alarm point in captured data.

Analog signal channel

Signal levels in each channel

Search mode: raising, falling, window-in, window-out

Logic signal channel

Signal level (H or L) in each channel


Pulse signal channel

Signal levels in each channel

Search mode: raising, falling, window-in, window-out

Alarm detected point on selected alarm signal output channel

Equipped with Ethernet (LAN) and USB interface to communicate with PC

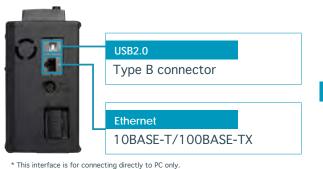

Measurement method	Data file format in PC	Available sampling speed
Real time measurement Transfer data captured with GL980 to PC.	Binary or CSV format	1 ms to 1 min
Memory measurement Transfers data to PC after completed capturing data to built-in RAM with GL980.	Binary format	1 μs to 1 min

^{*} Captured data can be saved with storage device on GL980 and PC simultaneously.

Convenient function with LAN (Ethernet interface) capability

When GL980 is connected to LAN using the Ethernet interface, networked computer can monitor real-time measured value, transfer files, and change set ups without using application software (GL980_2000-APS software).

Web server function

GL980 can be controlled externally via a network on the WEB browser, which also supports real-time monitoring and ability to use the menu buttons.

FTP server function

File in available storage device on GL980 except built-in RAM can be transferred or deleted from the PC.




NTP client function


The clock on the GL980 is periodically synchronized with the NTP server.



Email sending function

Send information when alarm occurs, or when battery is low, or when communication speed drops, or to notify when the space becomes limited on the storage device by an e-mail to specified address. Information can also be sent periodically by settings.

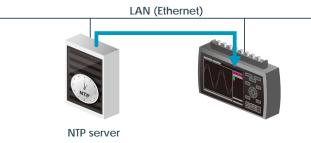

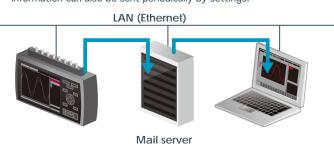

USB Drive Mode to Easily Transfer Files to PC

USB drive mode

The USB drive mode function allows simple data transfer to the PC from built-in Flash memory and SD Flash memory card which acts as USB Flash drive on GL980. It also allows to add, remove, and delete files from storage device on GL980 from PC file browsing explorer.

* Built-in Flash and SD, except USB memory device.



Start USB drive mode by turning the power on while pressing START/STOP key.

Move files by drag & drop feature in PC.

PC measurement with standard PC software included (GL980_2000-APS)

Multiple measurement screens including Y-T waveform, XY chart

Y-T display

Recorded signal is displayed in waveform (Y-T) and digital value for each channel.




Y-T display (Zone mode)

Screen is divided into multiple zone, and channels can be assigned to each zone.



XY display

Four groups of XY charts are displayed.

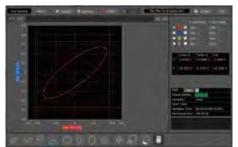

Easily Connect to the GL980 with Quick Set Up Conditions



The settings are divided in to four screens with amp, recording, trigger and other.

Includes free running feature similar to the main unit.


Measurement voltage ranges and other ranges can be set while reading an input signal prior to capturing the data.



GL980 is recognized automatically by clicking the connection button regardless of Ethernet or USB.

GL980 supports DHCP



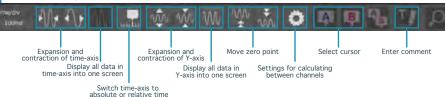

Convenient features from the GL980_2000-APS software

File combine and bind function

Superimpose

Data or file recorded on another unit or time can be imported as additional channels when using a SUPERIMPOSE function.

Link

Captured data in multiple files are connected and saved as new file. It is helpful in reviewing data captured with relay mode.

* Measurement parameters of each file must be the same.

Direct Excel function

The GL980_2000-APS software executes recorded data into a file on PC in real time and exports to a specified Excel file at the same time.

This is a valuable tool in creating report requiring post-process calculation with Excel software.


Printing function

The waveform of the playback data can be printed using a default printer. Printing range of the waveform can be set between cursors or all waveforms.

Advanced software GL-Connection (version 2.0)

■ The high-performance software GL-Connection is included as an accessory

Major features Supports connection with other GL units (*) simultaneously Supports up to 20 GL units (*) Screen division function: 4 screens FFT analysis function * GL220, GL240, GL820, GL840 series, GL900 series, GL7000 series, GL980 and GL2000 can be connected. * Ethernet (LAN) and USB can be mixed for connection between GL unit and PC.

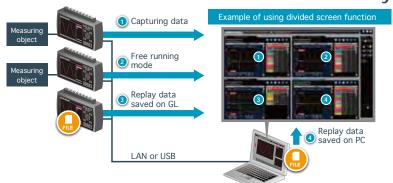

Display (LCD)			Description	
(LCD)	Size		7-inch TFT color LCD (WVGA: 800 x 480 dots)	
()	Information		Waveform in Y-T with digital values, Enlarged waveforms,	
			Digital values and Real-time statistical result values, XY graph	
	Languag	je	English, French, German, Spanish, Russian, Chinese, Korean, Japanes	
Interface	Туре		Ethernet (10 BASE-T/100 BASE-TX), USB2.0	
to PC	Function		Data transfer to PC (up to 1 ms sampling), Control command to GL980	
	Ethernet functions		Web server function, FTP server function, NTP client function, DHCP client function, Email send function	
	USB fun	ction	USB mode (File transfer and deletion from built-in flash and SD on GL980)	
Trigger	Trigger	action	Start or stop capturing data by triggering	
function	Trigger	Start	Off, Measured signal, Alarm, External, Scheduled time, Scheduled day, Elapsed time	
	source	Stop	Off, Measured signal, Alarm, External, Scheduled time, Scheduled day, Elapsed time	
	Combina	ition	Level OR, Level AND, Edge OR, Edge AND	
	Threshold	Analog (*1)	High or Low in level mode, Rising or Falling in edge mode, Window-in, Window-ou	
		Logic	H or L (4-channel signal pattern)	
		Pulse	High or Rising, Low or Falling, Window-in, Window-out	
	Repeat a	action	Off, On (Re-armed automatically)	
	Trigger	hold out	Hold off repeat action in specified period	
		Mode	Previous start to next start, previous stop to next start	
		Time	zero second (no hold off) to 9999 hrs. 59 min. 59 sec	
	Defection	n accuracy	± 0.5 % of measurement range	
	Pre-trigg	ger	Up to the number of capturing data points (max. 4000000)	
			specified in built-in RAM (only when built-in RAM is used)	
Alarm	Alarm a	ction	Displays and outputs a signal when alarm is detected	
function	Threshold	Analog input	High, Low, Window-in, Window-out	
		Logic input	H or L (signal in each channel)	
		Pulse input	High or Rising, Low or Falling, Window-in, Window-out	
	Combina		OR (Source channel can be assigned with OR condition to output port	
	Detection cycle		Link with analog sampling	
	Alarm h		On or Off	
		on accuracy	± 0.5 % of measurement range	
Storagve	Built-in F		Four million samples for each channel	
deice	Dunc'ili I		4 M samples x 1 bank, 2 M sample x 2 banks, 1 M samples x 4 banks, 500 k samples x 8 bank	
		Capturing data points		
			Captured data	
		Data type Auto-save	Transfer captured data to other devices after capturing is completed (It can be enabled or disabled	
	Built-in F		1 2 1 1	
	Built-in i		4 GB (for capacity of data: approx. 3.9 GB)	
	Francisco et	Data type	Captured data, Condition settings, Screen copy	
	External	USB (*2)	Support USB Flash memory device (*3) by USB2.0 Type A port, Single port, No memory capacity lim	
		Data type	Captured data, Condition settings, Screen copy	
	External	SD CARD (*2)	Support SDHC memory card (up to 32 GB) by SD Card slot, Single slo	
		Data type	Captured data, Condition settings, Screen copy	
Capturing	Mode		Off (Normal), Ring, Relay	
mode	Off (Normal)		Save data between start to stop	
	Ring (*4	.)	Save most recent data of specified number	
		Destination	Built-in RAM, Built-in Flash, USB or SD	
		Number of capturing data	1000 to 10000000 data (*5)	
		Sampling	up to 1 MS/s (interval 1 $\mu s)$ in built-in RAM, up to 1 kS/s (interval 1 ms) with GBD forms	
			in other device, up to 100 S/s (interval 10 ms) with CSV format in other device	
	Relay		Save data to multiple files with specified capturing time or file size	
			(up to 4 GB) until recording data is stopped	
		Destination	Built-in Flash, USB or SD	
		Sampling	up to 1 kS/s (interval 1 ms) with GBD format, up to 100 S/s (interval 10 ms) with CSV form	
			Off, 1, 2, 6, 12, 24 hrs., specific time, or any time with key operatio	
Data backup	Interval			
Data backup	Interval	Sampling	up to 1 kS/s (interval 1 ms) with GBD format,	
Data backup	Interval	Sampling	up to 1 kS/s (interval 1 ms) with GBD format, up to 100 S/s (interval 10 ms) with CSV format	
Data backup	Interval			
Data backup	File dest		up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD	
	File dest	ination bing external memory	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD	
Search	File dest Hot-swapp Function	ination bing external memory	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backu	
Search	File dest	cination ping external memory Analog	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backu Search for specific point in captured data Signal levels in each channel	
Search	File dest Hot-swapp Function Search	ination ping external memory Analog Logic	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backul Search for specific point in captured data Signal levels in each channel 4-channel signal pattern	
Search	File dest Hot-swapp Function Search	ination sing external memory Analog Logic Pulse	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backu Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel	
Search	File dest Hot-swapp Function Search	ination ping external memory Analog Logic Pulse Alarm	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point	
Search function	File dest Hot-swapp Function Search factor	ination ping external memory Analog Logic Pulse Alarm	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time	
Search function	File dest Hot-swapp Function Search factor	ination ping external memory Analog Logic Pulse Alarm	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average	
Search function	File dest Hot-swapp Function Search factor	ination ping external memory Analog Logic Pulse Alarm	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backul Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data	
Search function	File dest Hot-swapp Functior Search factor	ination jing external memory Analog Logic Pulse Alarm	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backul Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS	
Search function Calculation function	File dest Hot-swapp Functior Search factor Statistic	ination ing external memory Analog Logic Pulse Alarm al	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD forma	
Search function Calculation function	File dest Hot-swap; Functior Search factor Statistic	ination ing external memory Analog Logic Pulse Alarm al	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD forma Measured value can be converted to the specified engineering unit	
Search function Calculation function	File dest Hot-swap; Functior Search factor Statistic Betweer neering un Analog v	ination ing external memory Analog Logic Pulse Alarm al channels in channels int) function voltage	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured date Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD formal Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset)	
Search function Calculation function	File dest Hot-swap Functior Search factor Statistic Betweer leering un Analog N Tempera	ination long external memory Analog Logic Pulse Alarm an channels int) function voltage ature	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured date Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset)	
Search function Calculation function Scaling (Engir	File dest Hot-swapp Functior Search factor Statistic Betweer leering un Analog v Tempera Pulse co	ination long external memory Analog Logic Pulse Alarm an channels int) function voltage ature	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backul Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain)	
Search function Calculation function Scaling (Engir	File dest Hot-swapp Functior Search factor Statistic Betweer leering un Analog v Tempera Pulse co	ination long external memory Analog Logic Pulse Alarm an channels int) function voltage ature	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backul Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured date Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric	
Search function Calculation function Scaling (Engin	File dest Hot-swapp Functior Search factor Statistic Betweer heering un Analog v Tempera Pulse counction	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backu Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD forma Measured value can be converted to the specified engineering uni Converts using four reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen)	
Search function Calculation function Scaling (Engire Annotation function function function)	File dest Hot-swapp Function Search factor Statistic Betweer neering un Analog v Tempera Pulse counction	ination ing external memory Analog Logic Pulse Alarm al a channels nit) function voltage sature unt	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD forma Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed	
Search function Calculation function Scaling (Engir Annotation fu	File dest Hot-swapp Function Search factor Statistic Between eering un Analog v Tempera Pulse co	ination ing external memory Analog Logic Pulse Alarm al channels in channels int) function voltage ature unt	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backut Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured date Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD forma Measured value can be converted to the specified engineering uni Converts using four reference points (gain, offset) Converts using two reference points (offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first & characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed	
Search function Calculation function Scaling (Engir Annotation fu	File dest Hot-swapp Function Search factor Statistic Betweer Beering un Analog v Tempera Pulse counction AC adap DC powe	ination ing external memory Analog Logic Pulse Alarm al a channels int) function voltage ature unt	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured date Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed	
Search function Calculation function Scaling (Engir Annotation fu	File dest Hot-swap Function Search factor Statistic Between Horizon Between Bering un Analog v Tempera Pulse counction AC adap DC powe Battery	ination ing external memory Analog Logic Pulse Alarm al a channels int) function voltage ature unt teter er pack	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backur Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required	
Search function Calculation function Scaling (Engir Annotation fu	File dest Hot-swap Function Search factor Statistic Between Horizon Between Bering un Analog v Tempera Pulse counction AC adap DC powe Battery	ination ing external memory Analog Logic Pulse Alarm al a channels int) function voltage ature unt	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backur Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required	
Search function Calculation function Scaling (Engir Annotation fu Operating env Power source	File dest Hot-swap Function Search factor Statistic Between Horizon Between Bering un Analog v Tempera Pulse counction AC adap DC powe Battery	ination ing external memory Analog Logic Pulse Alarm al a channels int) function voltage ature unt teter er pack	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40°C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save	
Search function Calculation function Scaling (Engir Annotation function function Power source Power	File dest Hot-swap Function Search factor Statistic Between Horizon Between Bering un Analog v Tempera Pulse counction AC adap DC powe Battery	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt teter er pack ter(in 240 V AC)	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD formal Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save	
Search function Calculation function Scaling (Engir Annotation function function Power source Power	File dest Hot-swapp Functior Search factor Statistic Betweer heering un Analog v Tempera Pulse con inction AC adap DC powe Battery AC adap	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt teter er pack ter(in 240 V AC)	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in 680 formal Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (offset) Converts using two reference points (offset) Converts using two reference points (spain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 43 VA (62 VA while charging battery) with disable screen save	
Search function Calculation function Scaling (Engir Annotation function function Power source Power	File dest Hot-swapp Functior Search factor Statistic Betweer heering un Analog v Tempera Pulse con inction AC adap DC powe Battery AC adap	Analog Logic Pulse Alarm al channels nit) function voltage ature unt teter er pack	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in 6B0 formal Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 43 VA (62 VA while charging battery) with disable screen save Approx. 0.6 A (0.9 A while charging battery) with enabling screen save Approx. 0.53 A (0.82 A while charging battery) with enabling screen save	
Search function Calculation function Scaling (Engir Annotation function function Power source Power	File dest Hot-swapp Function Search factor Statistic Betweer Beering un Analog v Tempera Pulse counction AC adap DC powe Battery AC adap DC drive	Analog Logic Pulse Alarm al channels nit) function voltage ature unt teter er pack	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backur Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 0.6 A (0.9 A while charging battery) with disable screen save Approx. 0.6 A (0.9 A while charging battery) with disable screen save Approx. 0.53 A (0.82 A while charging battery) with disable screen save	
Search function Calculation function Scaling (Engir Annotation function function Power source Power	File dest Hot-swap Function Search factor Statistic Between Horizon Between Beering un Analog v Tempera Pulse counction AC adap DC powe Battery AC adap DC drive	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt teter er pack eter(in 240 V AC) et (24 V) et (12 V)	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backur Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 0.5 A (0.94 A while charging battery) with disable screen save Approx. 0.53 A (0.82 A while charging battery) with disable screen save Approx. 1.22 A (Cannot charge battery) with disable screen save Approx. 1.24 (Cannot charge battery) with disable screen save	
Search function Calculation function Scaling (Engir Annotation function function Power source Power	File dest Hot-swap Function Search factor Statistic Between Horizon Between Beering un Analog v Tempera Pulse counction AC adap DC powe Battery AC adap DC drive	Analog Logic Pulse Alarm al channels nit) function voltage ature unt teter er pack	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (grin) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed) 100 to 240 V AC, 50/60 H2 Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 0.6 A (0.9 A while charging battery) with enabling screen save Approx. 0.53 A (0.82 A while charging battery) with enabling screen save Approx. 1.22 A (Cannot charge battery) with disable screen save Approx. 1.24 (Cannot charge battery) with disable screen save Approx. 1.81 A (Cannot charge battery) with disable screen save	
Search function Calculation function Scaling (Engin Annotation fu Operating en Power source Power consumption	File dest Hot-swapp Functior Search factor Statistic Betweer neering un Analog v Tempera Pulse con inction AC adap DC powe Battery AC adap DC drive DC drive	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt iter er pack ter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC)	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain) Converts using two reference points (offset) Converts using two reference points (offset) Converts using two reference points (pain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 ℃ when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 0.6 A (0.9 A while charging battery) with disable screen save Approx. 1.22 A (Cannot charge battery) with disable screen save Approx. 1.24 (Cannot charge battery) with disable screen save Approx. 1.81 A (Cannot charge battery) with disable screen save Approx. 1.55 A (Cannot charge battery) with disable screen save	
Search function Calculation function Scaling (Engin Annotation fu Operating env Power source Power consumption	File dest Hot-swapp Functior Search factor Statistic Betweer neering un Analog v Tempera Pulse con inction AC adap DC powe Battery AC adap DC drive DC drive	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt iter er pack ter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC)	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain, offset) Converts using two reference points (gain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 °C when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 49 VA (60 VA while charging battery) with disable screen save Approx. 1.22 A (Cannot charge battery) with disable screen save Approx. 1.24 A (Cannot charge battery) with enabling screen save Approx. 1.81 A (Cannot charge battery) with enabling screen save Approx. 1.85 A (Cannot charge battery) with enabling screen save Approx. 1.86 A (Cannot charge battery) with enabling screen save Approx. 1.85 A (Cannot charge battery) with enabling screen save Approx. 1.85 A (Cannot charge battery) with enabling screen save Approx. 1.55 A (Cannot charge battery) with enabling screen save	
Data backup Search function Calculation function Scaling (Engir Annotation fu Operating env Power source Power consumption External dime Weight Vibration resis	File dest Hot-swapp Function Search factor Statistic Betweer Horizon Statistic Betweer Horizon Tempera Pulse counction AC adap DC powe Battery AC adap DC drive DC drive DC drive	ination ing external memory in Analog Logic Pulse Alarm al in channels init) function voltage ature unt iter er pack ter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC) iter(in 240 V AC)	up to 100 S/s (interval 10 ms) with CSV format Built-in Flash, USB or SD Hot-swapping USB or SD Flash memory with key operation during data backup Search for specific point in captured data Signal levels in each channel 4-channel signal pattern Rising, Falling, Window-in, Window-out in each channel Alarm occurring point Real-time: Display digital and statistical values at the same time Function: Maximum, Minimum, Peak-to-peak (P-P), Average Replay: Statistical values between cursors in replay captured data Function: Maximum, Minimum, Peak-to-peak (P-P), Average, RMS Addition, subtraction, multiplication and division for two analog inputs (only in GBD format Measured value can be converted to the specified engineering unit Converts using four reference points (gain) Converts using two reference points (offset) Converts using two reference points (offset) Converts using two reference points (pain) Comment can be set in each channel, up to 31 alphanumeric characters and symbols (Display first 8 characters on screen) 0 to 40 ℃ when driven by AC adapter or battery, 5 to 85 % RH (non condensed 100 to 240 V AC, 50/60 Hz 8.5 to 24 V DC (required cable option B-514) Two battery packs (option B-569) required Approx. 48 VA (66 VA while charging battery) with disabling screen save Approx. 0.6 A (0.9 A while charging battery) with disable screen save Approx. 1.22 A (Cannot charge battery) with disable screen save Approx. 1.24 (Cannot charge battery) with disable screen save Approx. 1.81 A (Cannot charge battery) with disable screen save Approx. 1.55 A (Cannot charge battery) with disable screen save	

Analog input :	specificati <u>ons</u>	;				
Item		Description				
Number of input channels		8 channels				
Type of input terminal		Isolated BNC connector and Screw terminal (M3.5 screw) (*6)				
Input method		All channels isolated unbalanced input, Simultaneous sampling				
Sampling speed (interval)				(1 μs to 1 min) and External (*7)		
Sampling interval		1, 2, 5, 10, 20, 50, 100, 200, 500 µs,				
	ourripiirig iiri		1, 2, 5, 10, 20, 50, 100, 200, 500 ms, 1, 2, 5, 10, 20, 30 sec, 1 min			
		* When using built-in RAM: 1 µs to 1 min, using other storage: 1 ms to 1 mir				
Frequency res	nonse		DC to 200 kHz (within +1/-4 dB)			
Measurement)	20, 50, 100, 200, 500 mV, 1, 2, 5, 10, 20, 50, 100, 200, 500 V, and 1-5V F.S			
range	DC-RMS	,				
range	(DC coupling	and	10, 25, 50, 100, 250, 500 mV rms, 1, 2.5, 5, 10, 25, 50, 100, 250 V rms F. • Crest Factor: up to 2			
	rms value m		Frequency response:	20 Hz to	10 kHz	
	TITIS VAIGE III	eas.)			ie of the DC and AC components	
			in effective value, tha			
	Temperature		Thermocouple: K, J, E,			
	Humidity	=			ity sensor (option B-530)	
Filter (Low pa					, 5, 50 kHz (at -3dB, -6dB/oct)	
A/D converte					0000 of the measuring full range)	
		\	± 0.25% of Full Scale	tion: 1/40	5000 of the measuring full range)	
Measurement					- 20.11- 10.141-)	
accuracy (*8)			± 1.5% of Full Scale (Si	ne wave ir	· · · · · · · · · · · · · · · · · · ·	
	Temperature		Measurement range	100.00	Measurement accuracy	
	(Thermocouple)	R/S	0 ≤ TS ≤			
	(*9)		100 < TS ≤		± 5.0 °C	
					± (0.05 % of reading + 3.0 °C)	
		_			± (0.05 % of reading + 3.0 °C)	
		В	400 ≤ TS ≤			
					± (0.05 % of reading + 3.0 °C)	
		K			± (0.05 % of reading + 3.0 °C)	
			-100 < TS ≤		, ,	
		E			± (0.05 % of reading + 3.0 °C)	
					± (0.05 % of reading + 2.0 °C)	
		Т	-200 ≤ TS ≤		' " '	
			-100 < TS ≤		± (0.1 % of reading + 1.5 °C)	
		J	-200 ≤ TS ≤			
			-100 < TS ≤	100 °C		
					± (0.05 % of reading + 2.0 °C)	
		N	-200 ≤ TS <		± (0.1 % of reading + 3.0 °C)	
					± (0.1 % of reading + 2.0 °C)	
		W			± (0.1 % of reading + 2.5 °C)	
				npensatio	n (R.J.C.) accuracy: ± 1.0 °C	
R.J. Compens	ation		Internal or External			
Burnout			Detecting burnout of Thermocouple with menu operation in free-run mode			
Input impedar			1 MΩ ±5%			
Signal source			up to 1 kΩ			
Maximum	Between(+)	- (-) terminal	20 mV to 2 V range: 30 V DC, 5 V to 500 V range: 500 V DC			
input voltage Between channels (-) - (-) terminals Between channel - GND						
		60 V P-P				
Maximum voltage	Between cha	annels	1000 V P-P (1 minute)			
(withstand)	Between cha	annels - GND	1000 V P-P (1 minute)			
Isolation resis	tance		Min. 50 MΩ (at 500 V I	OC) with b	etween input and GND	
Common-mode rejection ratio		Min. 90 dB (50/60 Hz, signal source impedance: max. 300 Ω)				
Signal-noise ratio (S/N)			20 mV range : - 40 dB (when input terminals + and - are shorted)			
orginal molec m			Other range : - 50 dB (when input terminals + and - are shorted)			

External input	& output	signal specificati	ions
Item			Description
External	Input (*10, *11)		Logic or Pulse (4 channels), Trigger or Sampling (1 channel)
input/output	Output (*10, *12)		Alarm (4 channels) or Trigger (1 channel) with Alarm (3 channels)
Input signal	nput signal Logic Voltage range		0 to +30 V (common ground)
specification	and	Threshold	Approx. +2.5 V
	Pulse	Hysteresis	Approx. 0.5 V (+2.5 to +3 V)
	External	Voltage range	0 to +30 V (common ground)
	trigger and	Threshold	Approx. +1.9 V
	sampling	Hysteresis	Approx. 0.2 V (+1.9 to +2.1 V)
Logic measure	ement		Measures the status (H or L) of the signal input to each channel
Pulse	Measurer	ment	Counts pulse signals input to each channel
measurement	Pulse cou	nt detection cycle	10 μs to 1 hr. (Set separately from analog signal sampling interval)
	Maximum	n pulse input	Maximum input frequency : 100 kHz,
			Maximum count number : 15 M count (24 bit counter)
	Measurement mode		Rotation : Counts the number of pulses per detection cycle
			and then converts measured value to rotation in rpm
			• Span: 0 to 500 M rpm/F.S.
			Accumulating: Accumulates the number of pulses count
			per detection cycle from the start of measurement
			Span: 0 to 20 M count/F.S. (Span is set automatically)
			Instant : Counts the number of pulses per detection cycle
			Span : 0 to 20 M count/F.S.
External trigg	er input (*10)	Executes specified trigger action
External samp	oling input	(*10)	Executes sampling of measurement signal with each external sampling signal
			Maximum input frequency: 100 kHz (Time error: 1 μs or less)
Output	Alarm ou	tput	Open collector (pull-up to 5 V with 10 kΩ resistor)
signal			Maximum load is the 24 V and 100 mA
	Trigger o	output	When a trigger is detected, output terminal releases approximately 500 µs width pulse (Low active)

Item		Description	
Model name		GL980_2000-APS	
Supported 05	S (*13)	Windows10, 8.1, 8, 7 (SP1 or later)	
Functions		Control GL980 and GL2000, Real-time data capture, Replay data,	
		and Data format conversion	
Supported de	vice	1 unit of GL980 or GL2000	
Settings cont	rol	Input condition, Capturing condition, Trigger/Alarm condition, other	
Transfer of	In memory capturing	Transfer the captured data to a PC sequentially while data is saved in built-in RAM on GL980	
captured data	with GL980	• Sampling interval: 1 μs to 1 min	
	In real time capturing	Transfer the captured data to a PC while data is saved in built-in flash memory,	
		SD or USB on GL980	
		Sampling interval: 1 ms to 1 min saved in GBD and CSV format	
Displayed information		Analog waveform, Logic waveform, Pulse count waveform, Digital value	
Display mode		Waveform in Y-T with digital values, Enlarged waveforms,	
		Statistical calculation result values and history, XY graph	
File operation		Converting data format to CSV from GBD binary with data between cursors or all data	
Past data scr	een function	Displays the current data or past part of data by switching.	
		Available at sampling speed 1 kS/s to 1 S/m (1 ms to 1 min sampling interval)	
Statistical calculation		Maximum, Minimum, Average and Peak-to-peak (p-p) value during data capturing	

Battery pack B-569 (option) Specifications				
Item	Description			
Capacity	7.2 V, 2900 mAh			
Battery operating time	Approx. 2 hrs. in displayed signal (LCD: max. brightness)			
	Approx. 2.5 hrs. in screen saver mode (no display)			
	* When two battery packs are installed in GL980.			
	Condition: 1 sample per second (1 s), saving captured data to built-in Flash,			
	use two fully charged battery packs, temperature is 25 °C			
Method of charging	Charging on GL980			
Charging time	Approx 10 hrs. (charging two batteries)			
Other functions	If an AC power failure occurs, it will automatically switch			
	from the AC adapter to the battery pack. (AC adapter priority use)			
	When the voltage of the battery pack reaches low, the measurement			
	is automatically stopped after saving data file preserving the accumulated data.			

- It can set for each channel.
- File size of captured data is up to 4GB in each file.
- (*2) (*3) Standard USB memory devices are required.
- Required minimum capturing time is 15 seconds in GDB format, 30 seconds with CSV format.
- When using built-in RAM, 10 to 4000000 data
- Connections can be made individually to BNC terminal or M3.5 screw terminal.
- Required Input/Output cable for GL series (B-513) option for connecting signal.
- Subject to the following conditions:
 Room temperature is 23 °C ± 5 °C.

 - When 30 minutes or more have elapsed after power has turned on.
 Filter is set to Line (1.5 Hz) in DC measurement and temperature.
 - GND terminal is connected to ground.
 - It is placed vertically.
- Average of the measured values is used.

 Wire size of Thermocouple used is 0.32mm diameter in the T and K type, and 0.65mm diameter in other types.
- (*10) Required Input/Output cable for GL series (B-513) option for connecting signal.
- (*11) Select either Logic input (4 channels) or Pulse input (4 channels), select either external Trigger input or Sampling input.
- (*12) Select either Trigger output (1 channel) or Alarm output (1 channel). Available 3 channels Alarm output always.
- (*13) Graphtec does not support software/driver used with operating systems that have become obsolete and are no longer supported by the OS developer. In the Windows 7, edition of Ultimate, Enterprise, Professional and Home Premium are supported.

• AC adapter with power cable


Input/Output cable for GL B-513

- CD-ROM (PC application software, User manual)
- Tilt stand set (including mounting screws M4)

• Ferrite core (attach to cable for radiation reduction)

- Quick start guide and Safety guide • Cover (attached to the main body)
- Screws (M3.5) for input terminal

Options and Accessories		
Item	Model No.	Description
Input/Output cable for GL	B-513	2 m long (no clip on end of cable)
DC drive cable	B-514	2 m long (no clip on end of cable)
Humidity sensor	B-530	With 3 m long signal cable (with power plug)
Shunt resistor	B-551	250 ohms (Converts signal from "4-20mA" to "1-5V" .)
Battery pack	B-569	Rechargeable Lithium-ion battery (7.2 V, 2900mAh)
Bracket for DIN rail	B-570	Bracket for DIN rail (GL980 main body), Build-to-order
Cover	B-579	Rubber protector (for replacement)
Carrying case	B-581	Comming soon
Input cable, Safe probe - BNC	RIC-141A	Insulated, 1:1 (42pf), 1.2 m long, 300 V DC, CAT II
Input cable, BNC - BNC	RIC-142	Insulated, 1.5 m long, 1000 V DC, CAT II
Input cable, Banana - BNC	RIC-143	Insulated, 1.6 m long, 600 V DC, CAT II
Clip, Alligator (small size)	RIC-144A	For RIC-143, Aperture 11 mm, 300 V DC, CAT II, Max. 15 A
Clip, Alligator (middle size)	RIC-145	For RIC-143/147, Aperture 20 mm, 1000 V DC, CAT II, Max. 32 A
Clip, Grabber	RIC-146	For RIC-143/147, Aperture 5 mm, 1000 V DC,CAT III, Max. 1 A
Input cable, Banana - BNC (Hi-voltage)	RIC-147	Insulated, 1.6 m long, 1000 V DC, CAT II
Input terminal adapter	SMA-102	Banana (receptacle) to BNC (plug), Insulated
AC Adapter	ACADP-20	Input: 100 - 240 V AC, Output: 24 V DC

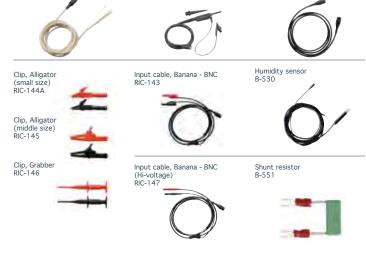

Input cable, Safe probe - BNC RIC-141A



Input cable, BNC - BNC RIC-142

- Due to the possibility of equipment or PC failure, the data files on the instrument are not guaranteed to hold memory. Please make a backup of data whenever possible to avoid data loss. Brand names and product names listed in this brochure are the trademarks or registered trademarks of their respective owners. Specifications and details are subject to change without notice. For additional information, please check our web site or contact your local representative.

Use equipment correctly and safely!

- · Use only in accordance with product's user manual.
- •To avoid malfunction or an electric shock by current leakage or voltage, please ensure ground connection and use according to the specifications

For pricing or any further information, please contact Omni Instruments Ltd.



Contact Details:

Tel: +44 1382 443000 Email: info@omni.uk.com

Mailing Address: Unit 1, 14 Nobel Road, Wester Gourdie Industrial Estate, Dundee, DD2 4UH.

Website: www.omniinstruments.co.uk