

Fridge/Freezer Temperature Probe Installation Kit




Kit Includes:

1x Seal, 1x Magnetic tie, 4x Wire ties,
2x Probe clips, 1x Adhesive pad

Installation Instructions

1 Position Device

Attach your device and bracket to the fridge using the adhesive pad.

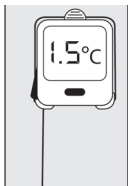


2 Attach Cable Entry Seal

Clean and dry the area where the cable will run through the door seal.


Peel off one half of the cable entry seal backing tape and carefully stick it in position, in line with the door seal.

Note: It is often best to run the cable through the hinged side of the door (picture shows open side for sake of clarity).

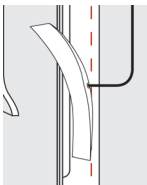

3 Insert Probe Cable

Thread the cable through the cutout on the seal, peel off the other half of the backing tape and stick the cable entry seal firmly in place.

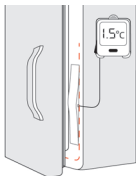

4 Positioning

Using the wire ties, magnetic tie and adhesive clips, position the probe tip in the desired measurement location (away from fridge walls is recommended).

Excess cable should be coiled and stored inside fridge.

Note: Clean and dry surfaces before applying adhesive clips.

