


2-WIRE PROGRAMMABLE TRANSMITTER



- RTD, TC, Ohm, or mV input
- Extremely high measurement accuracy
- Galvanic isolation
- Can be installed in Ex zone 0
- 1- or 2-channel version

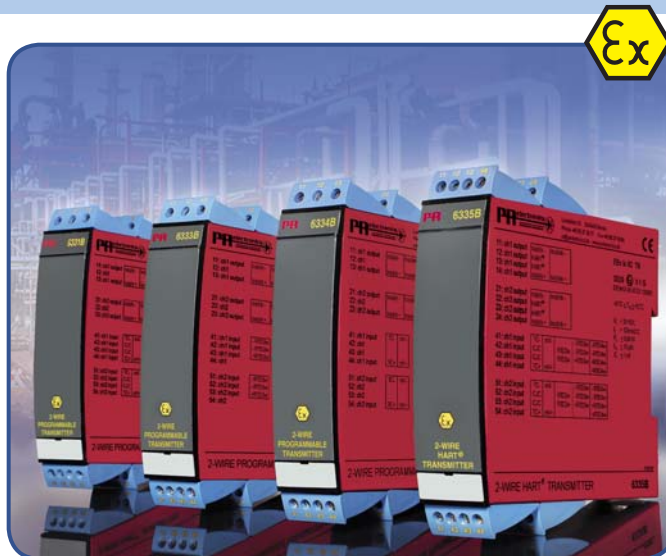

Application:


- Linearised temperature measurement with Pt100...Pt1000, Ni100...Ni1000, or TC sensor.
- Conversion of linear resistance variation to a standard analogue current signal, for instance from valves or Ohmic level sensors.
- Amplification of a bipolar mV signal to a standard 4...20 mA current signal.

Technical characteristics:

- Within a few seconds the user can program PR6331B to measure temperatures within all ranges defined by the norms.
- The RTD and resistance inputs have cable compensation for 2-, 3- and 4-wire connection.
- A limit can be programmed on the output signal.
- Continuous check of vital stored data for safety reasons.

Mounting / installation:

- Mounted vertically or horizontally on a DIN rail. Using the 2-channel version, up to 84 channels can be mounted per metre.
- **NB:** As Ex barrier we recommend 5104B, 5114B, or 5116B.

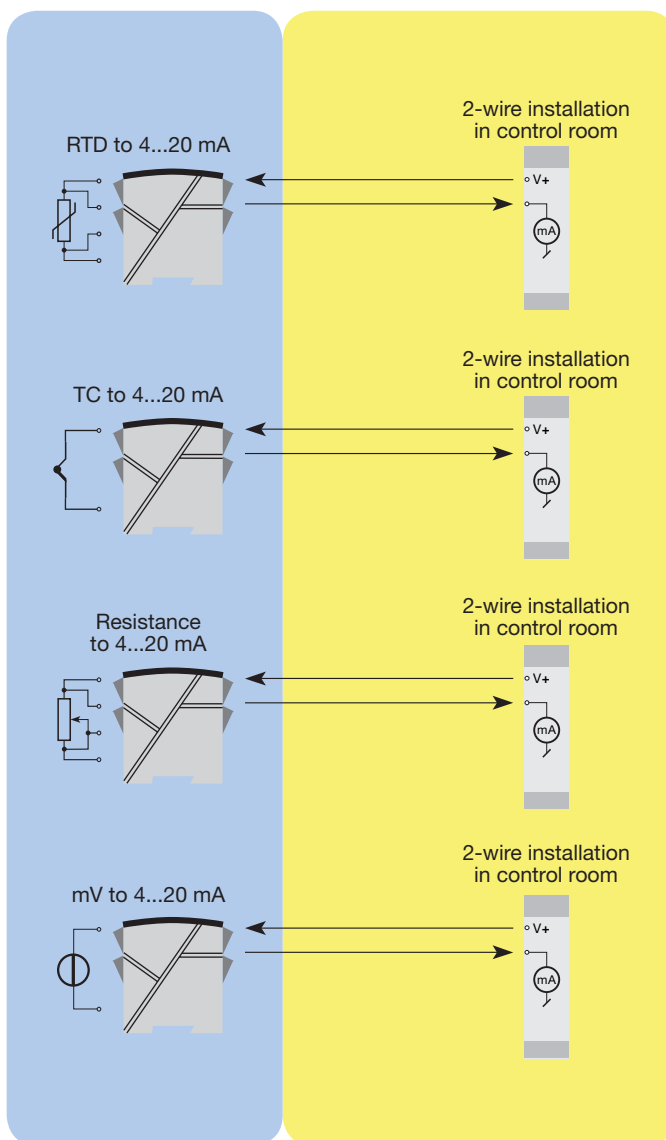


Order: 6331B

Type	Galvanic isolation	Channels
6331B	1500 VAC : 2	Single : A Double : B

Connections:

All connection options are shown in the user manual.

***NB!** Please remember to order CJC connectors type 5910EEx (channel 1) and 5913EEx (channel 2) for TC inputs with an internal CJC.

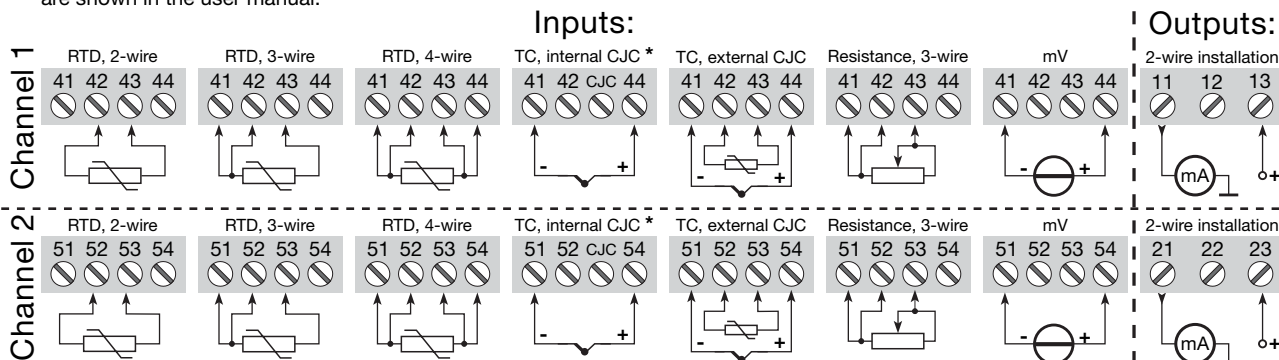

Electrical specifications:

Specifications range:

-40°C to +60°C

Common specifications:

Supply voltage, DC 7.2...30 VDC
 Voltage drop 7.2 VDC
 Isolation voltage, test / operation 1.5 kVAC / 50 VAC
 Isolation voltage, ch. 1 / ch. 2 1500 VAC
 Communications interface Loop Link
 Signal / noise ratio Min. 60 dB
 Response time (programmable) 1...60 s
 Signal dynamics, input 20 bit
 Signal dynamics, output 16 bit
 Calibration temperature 20...28°C
 Accuracy, the greater of general and basic values:

General values		
Input type	Absolute accuracy	Temperature coefficient
All	≤ ±0.05% of span	≤ ±0.01% of span / °C

Basic values		
Input type	Basic accuracy	Temperature coefficient
RTD	≤ ±0.2°C	≤ ±0.01°C/°C
Lin. R	≤ ±0.1 Ω	≤ ±10 mΩ/°C
Volt	≤ ±10 μV	≤ ±1 μV/°C
TC type:		
E, J, K, L, N, T, U	≤ ±1°C	≤ ±0.05°C/°C
TC type: B, R, S,		
W3, W5, LR	≤ ±2°C	≤ ±0.2°C/°C

EMC immunity influence < ±0.5% of span
 Extended EMC immunity:
 NAMUR NE 21, A criterion, burst < ±1% of span

Humidity < 95% RH (non-cond.)
 Dimensions (H x W x D) 109 x 23.5 x 104 mm
 Protection degree IP20

Electrical specifications, input:

Max. offset 50% of selec. max. value

RTD and linear resistance input:

RTD type	Min. value	Max. value	Min. span	Standard
Pt100	-200°C	+850°C	25°C	IEC 60751
Ni100	-60°C	+250°C	25°C	DIN 43760
Lin. R	0 Ω	5000 Ω	30 Ω	----

Cable resistance per wire (max.) 5 Ω
 Sensor current Nom. 0.2 mA

TC input:

Type	Min. temperature	Max. temperature	Min. span	Standard
B	+400°C	+1820°C	200°C	IEC584
E	-100°C	+1000°C	50°C	IEC584
J	-100°C	+1200°C	50°C	IEC584
K	-180°C	+1372°C	50°C	IEC584
L	-100°C	+900°C	50°C	DIN 43710
N	-180°C	+1300°C	100°C	IEC584
R	-50°C	+1760°C	200°C	IEC584
S	-50°C	+1760°C	200°C	IEC584
T	-200°C	+400°C	50°C	IEC584
U	-200°C	+600°C	75°C	DIN 43710
W3	0°C	+2300°C	200°C	ASTM E988-90
W5	0°C	+2300°C	200°C	ASTM E988-90
LR	-200°C	+800°C	50°C	GOST 3044-84

Cold junction compensation < ±1.0°C

Voltage input:

Measurement range -12...800 mV
 Min. span 5 mV

Current output:

Signal range 4...20 mA
 Min. signal range 16 mA
 Updating time 440 ms
 Load resistance ≤ (V_{supply} - 7.2) / 0.023 [Ω]

Sensor error detection:

Programmable 3.5...23 mA
 NAMUR NE43 Upscale 23 mA
 NAMUR NE43 Downscale 3.5 mA

EEx / I.S. approval:

KEMA 06ATEX0115 X II 1 G
 EEx ia IIC T6...T5
 Max. ambient temperature T6: -40°C ≤ Ta ≤ 40°C
 T5: -40°C ≤ Ta ≤ 60°C

Applicable in zone 0, 1 or 2

EEx / I.S. data:

Output, terminal 11...13, (21...23):
 U_i : 30 VDC
 I_i : 120 mADC
 P_i : 0.84 W
 L_i : 10 μH
 C_i : 1.0 nF

Input, terminal 41...44, (51...54):

U_o : 9.6 VDC
 I_o : 25 mADC
 P_o : 60 mW
 L_o : 33 mH
 C_o : 2.4 μF

GOST R approval:

VNIIFTRI, Cert. No. See homepage

Observed authority requirements: Standard:
 EMC 2004/108/EC EN 61326-1
 ATEX 94/9/EC EN 50014, EN 50020 and EN 50284

Of span = Of the presently selected range