


TEMPERATURE / mA CONVERTER



- Input for RTD, TC and mA
- Active / passive mA output
- 1 or 2 channels
- Can be supplied separately or installed on power rail, PR type 9400
- SIL 2-certified via Full Assessment

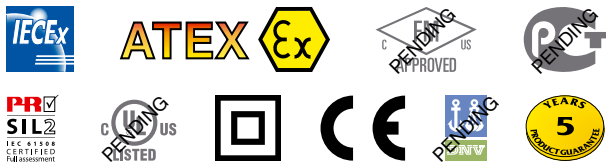

Advanced features:

- Configuration and monitoring by way of detachable display front (PR 4501); process calibration and signal simulation.
- Copying of the configuration from one module to others of the same type via the display front.
- TC inputs can use either the internal CJC or a terminal with a built-in Pt100 sensor (PR 5910, channel 1 / 5913, channel 2) for higher accuracy.
- The module automatically detects whether it is connected to an active or a passive current signal.
- Advanced monitoring of internal communication and stored data.
- SIL 2 functionality is optional and must be activated in a menu point.

Application:


- The device can be mounted in the safe area and in zone 2 / div. 2 and receive signals from zone 0, 1, 2, 20, 21 and 22 / Class I/II/III, Div. 1, Gr. A-G.
- Conversion and scaling of temperature (Pt, Ni and TC) and active current signals.
- Monitoring of error events and cable breakage via the individual status relay and/or a collective electronic signal via the power rail.
- The 9113 has been designed, developed and certified for use in SIL 2 applications according to the requirements of IEC 61508.

Technical characteristics:



- 1 green and 2 red front LEDs indicate operation status and malfunction.
- 2.6 kVAC galvanic isolation between input, output and supply.

APPLICATIONS


Input signals:

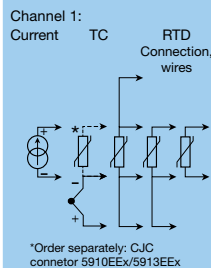

Output signals:

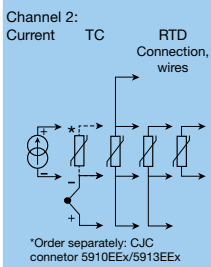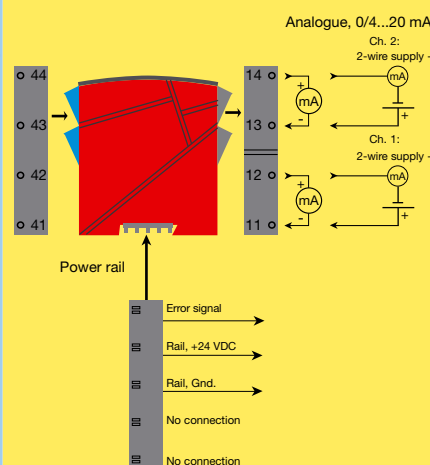

Power connection:

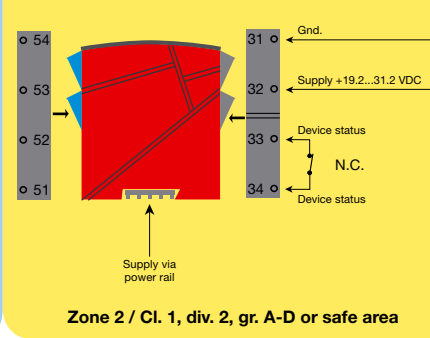

**Zone 0, 1, 2,
20, 21, 22 /
Cl. I/II/III, div. 1
gr. A-G**

Zone 2 / Cl. 1, div. 2, gr. A-D or safe area

Type	Channels
9113B	Single : A Double : B

4501	= Display / programming front
5910EE	= CJC connector, channel 1
5913EE	= CJC connector, channel 2
9400	= Power rail



PR 4501 Display / programming front

Application:

- Communications interface for modification of operational parameters in 9113.
- Can be moved from one 9113 device to another and download the configuration of the first unit to subsequent units.
- When mounted in the process, the display shows process values and module status.

Technical characteristics:

- In order to protect the configuration against unauthorised changes, access to the menus can be blocked by a password.

Mounting / installation:

- Click 4501 onto the front of 9113.

Electrical specifications:

Specifications range -20°C to +60°C
Storage temperature -20°C to +85°C

Common specifications:

Supply voltage, DC 19.2...31.2 VDC
Max. consumption ≤ 3.5 W (2 channels)
Fuse 400 mA SB / 250 VAC

Isolation voltages, test / operation
Input / output / supply 2.6 kVAC / 250 VAC
Output 1 to output 2 1.5 kVAC /
150 VAC reinforced

Status relay to supply 1.5 kVAC
150 VAC reinforced

Communications interface Programming front 4501
Signal / noise ratio Min. 60 dB (0...100 kHz)

Average response time incl. delay:

Temperature input ≤ 1 s
mA input ≤ 0.4 s
Calibration temperature 20...28°C

Accuracy, the greater of the general and basic values:

General values		
Input type	Absolute accuracy	Temperature coefficient
All	≤ ±0.1% of span	≤ ±0.01% of span / °C

Basic values		
Input type	Basic accuracy	Temperature coefficient
mA	≤ ±16 µA	≤ ±1.6 µA / °C
Pt100, Pt200, Pt 1000	≤ ±0.2°C	≤ ±0.02°C / °C
Pt500, Ni100, Ni120, Ni 1000	≤ ±0.3°C	≤ ±0.03°C / °C
Pt50, Pt400, Ni50	≤ ±0.4°C	≤ ±0.04°C / °C
Pt250, Pt300	≤ ±0.6°C	≤ ±0.06°C / °C
Pt20	≤ ±0.8°C	≤ ±0.08°C / °C
Pt10	≤ ±1.4°C	≤ ±0.14°C / °C
TC type: E, J, K, L, N, T, U	≤ ±1°C	≤ ±0.1°C / °C
TC type: R, S, W3, W5, LR	≤ ±2°C	≤ ±0.2°C / °C
TC type: B 160...400°C	≤ ±4.5°C	≤ ±0.45°C / °C
TC type: B 400...1820°C	≤ ±2°C	≤ ±0.2°C / °C

EMC immunity influence	< ±0.5% of span
Extended EMC immunity: NAMUR NE 21, A criterion, burst	< ±1% of span

Wire size 0.13...2.08 mm² / AWG 26...14 stranded wire

Relative humidity < 95% RH (non-cond.)

Protection degree IP20

Isolation:

Input to any 300 VAC double/reinforced
Analogue output to supply 300 VAC double/reinforced
Status relay to supply 150 VAC double/reinforced or 300 VAC basic

RTD input:

Input type	Min. value	Max. value	Standard
Pt100	-200°C	+850°C	IEC60751
Ni100	-60°C	+250°C	DIN 43760

Pt10*, Pt20*, Pt50*, Pt100, Pt200, Pt250, Pt300, Pt400, Pt500, Pt1000 Ni50, Ni100, Ni120, Ni1000

Cable resistance per wire (max.) 50 Ω
Sensor current Nom. 0.2 mA
Effect of sensor cable resistance (3- / 4-wire) < 0.002 Ω / Ω
Sensor error detection Programmable ON / OFF

TC input:

Thermocouple type B, E, J, K, L, N, R, S, T, U, W3, W5, LR

Cold junction compensation (CJC):

CJC via external sensor in connector 5910 20...28°C ≤ ±1°C
-20...20°C/28...70°C ≤ 2°C
CJC via internal sensor ±(2.0°C + 0.4°C * Δt)

Δt = internal temperature - ambient temperature
Sensor error detection Programmable ON or OFF (only wire breakage)

Sensor error current:

when detecting Nom. 2 µA
else 0 µA

Current input:

Programmable measurement ranges . 0...20 and 4...20 mA
Input resistance Nom. 20 Ω + PTC 50 Ω
Sensor error detection Programmable ON / OFF

Current output:

Signal range (span) 0...20 mA
Programmable signal ranges 0...20 / 4...20 / 20...0 and 20...4 mA

Load (max.) 20 mA / 600 Ω / 12 VDC

Load stability ≤ 0.01% of span / 100 Ω

Sensor error detection 0 / 3.5 / 23 mA / none

NAMUR NE 43 Upscale/Downscale.. 23 mA / 3.5 mA

Output limitation:
on 4...20 and 20...4 mA signals... 3.8...20.5 mA

on 0...20 and 20...0 mA signals ... 0...20.5 mA

Current limit ≤ 28 mA

2-wire 4...20 mA output:

Load stability ≤ 0.01% of span / 100 Ω

Load resistance ≤ (V_{supply} -3.5)/0.023 A [Ω]

External 2-wire supply range 3.5...26 VDC

Status relay in safe area:

Max. voltage 125 VAC / 110 VDC

Max. current 0.5 AAC / 0.3 ADC

Max. AC power 62.5 VA / 32 W

Ex / I.S. approvals:

IECEx certificate KEM 09.0052 X

ATEX certificate KEMA 07ATEX0148 X

FM certificate Pending

Marine approval:

Det Norske Veritas, Ships & Offshore .. Pending

GOST R approval:

VNIIFTRI, Cert No. www.prelectronics.com

SIL certification:

exida, Cert No. Pending

Observed authority requirements: Standard:

EMC 2004/108/EC EN 61326-1

LVD 2006/95/EC EN 61010-1

ATEX 94/9/EC EN 60079-0, -11, -15, -26 and EN 61241-0, -11

IECEx IEC 60079-0, -11, -15, -26 IEC 61241-0 and -11

c FM us FM 3600, 3611, 3810

CSA E60079-0, -15, -26

CSA 22.2 -25, -142, -213

ANSI / ISA-12.00.01/12.12.02

UL, Standard for Safety UL 61010-1

SIL IEC 61508

of span = of the currently selected measurement range

9000 EMC specifications - immunity :

Port	IEC 61326		NAMUR NE21 : 2007		IEC 61326-3-1		PR standard specifications	
	Phenomenon	Test standard	Test value	Criterion	Test value for safety functions	Criterion	Test value	Criterion
Enclosure	ESD input terminals	IEC 61000-4-2	4 kV Contact	B	6 kV Contact	B	6 kV Contact	B
	ESD	IEC 61000-4-2	4 kV / 8 kV Contact / Air	B	6 kV / 8 kV Contact / Air	A	6 kV / 8 kV Contact / Air	A 1%
	HF field	IEC 61000-4-3	10 V/m, 80...1000 MHz 3 V/m, 1.4...2 GHz 1 V/m, 2...2.7 GHz	A	10 V/m, 80...1000 MHz 3...10 V/m, 1.4...2 GHz	A	20 V/m, 80...1000 MHz 10 V/m, 1.4...2 GHz 3 V/m, 2...2.7 GHz	A 0.5%
DC power	Magnetic field	IEC 61000-4-8	30 A/m	A	100 A/m	A	30 A/m	A 0.5%
	Burst	IEC 61000-4-4	2 kV	B	2 kV	A	4 kV	A 1.0%
	Surge	IEC 61000-4-5	1 kV / 2 kV, Diff. / Comm. 0 Ω / 10 Ω	B	0.5 kV / 1 kV, Diff. / Comm. 0 Ω / 10 Ω	A	1 kV / 2 kV, Diff. / Comm. 0 Ω / 10 Ω	A 1.0%
	Conducted RF	IEC 61000-4-6	3 V, 150 kHz...80 MHz	A	10 V, 10 kHz...80 MHz Covers RF + LF	A	10 V, 150 kHz...80 MHz	A 0.5%
	Interruptions	IEC 61000-4-29	60% for 10 ms 100% for 20 ms	B	100% for 20 ms	B	60% for 10 ms 100% for 20 ms	B
I/O signal	Conducted LF	IEC 61000-4-16	Not required		Not required		15 Hz...150 kHz, 10 V 50 Hz, 300 Ω, 230 V	A 0.5%
	Burst	IEC 61000-4-4	2 kV	B	2 kV	A	2 kV	A 1.0%
	Surge input	IEC 61000-4-5	1 kV / 2 kV, Diff. / Comm. 40 Ω	B	0.5 kV / 1 kV, Diff. / Comm. 40 Ω	B	1 kV Diff. 40 W	B
	Surge output	IEC 61000-4-5	1 kV / 2 kV, Diff. / Comm. 40 Ω	B	0.5 kV / 1 kV, Diff. / Comm. 40 Ω	B	1 kV / 2 kV Diff. / Comm. 40 Ω	A 1.0%
	Conducted RF	IEC 61000-4-6	3 V	A	10 V, 10 kHz...150 kHz	A	10 V 150 kHz...100 MHz	A 0.5%
Conducted LF	IEC 61000-4-16	Not required		Not required		15 Hz...150 kHz, 10 V 50 Hz, 300 Ω, 230 V	A 0.5%	

9000 EMC specifications - immunity:

	Essential operation (functional safety)	Continuous unmonitored operation	Continuous monitored operation	Non-continuous operation
ESD IEC 61000-4-2	A	B	B	C
EM IEC 61000-4-3	A	A	A	B
Burst IEC61000-4-4	A	B	B	B
Surge IEC 61000-4-5	A	B	B	C
Conducted RF IEC 61000-4-6	A	A	A	C
Voltage interrupts IEC 610004-11	A	B	C	C

Note For type testing, it is highly recommended that performance criteria A be chosen for all phenomena and all tests. However, performance criteria B and/or C may be accepted provided that both the specification and the test report highlight such deviation(s) for the relevant combination(s) of function and test.

Specified function	Normal test level	Increased test level
Normal function	Normal specification (performance criteria A; B; C)	May fail
Safety function	Performance criteria - A, or - B + observed deviation + recovery time to be documented in the data sheet, or - C + observed behaviour documented in the data sheet	Performance criteria FS (i.e. no effect, outside the specification, or defined state)

- A:** During testing, normal performance within the specification limits.
- B:** During testing, temporary degradation, or loss of function or performance which is self recovering.
- C:** During testing, temporary degradation, or loss of function or performance which requires operator intervention or system reset occurs.

9000 EMC specifications - emission:

Class B equipment		Standard CISPR 22	
Disturbance	Test method	Frequency range	Limits
Radiated	Quasi-peak	30 to 230 MHz	30 dB (µV/m)
		230 to 1000 MHz	37 dB (µV/m)
Conducted	Quasi-peak	0.15...0.50 MHz	40 to 30 dB (µA)
	Average		30 to 20 (µA)
	Quasi-peak	0.50 to 30 MHz	30 dB (µA)
	Average		20 dB (µA)