

Pt100 converter

3102

- High accuracy, better than 0.1% of span
- Slimline housing of 6 mm
- Excellent EMC performance and 50/60 Hz noise suppression
- Selectable < 30 ms / 300 ms response time
- Pre-calibrated temperature ranges are selectable via DIP-switches



Application

- The 3102 temperature converter measures a standard 2-, 3- or 4-wire Pt100 temperature sensor, and provides an analog voltage or current output.
- The 3102 can be mounted in the safe area or in Zone 2 / Division 2 areas.
- Approved for marine applications.


Technical characteristics

- Flexibly powered by 24 VDC ($\pm 30\%$) via connectors.
- < 30 ms fast response time with simultaneous sensor error detection when selected.
- Selectable 300 ms response time when signal dampening is needed.
- High conversion accuracy in all available ranges, better than 0.1% of span.
- Meeting the NAMUR NE21 recommendations, the 3102 provides top measurement performance in harsh EMC environments.
- The device meets the NAMUR NE43 standard defining out of range and sensor error output values.
- A visible green LED indicates operational status of the unit and the input sensor.
- All terminals are protected against overvoltage and polarity error.
- Excellent signal/noise ratio of > 60 dB.


Mounting / installation / programming

- Selectable DIP-settings for easy configuration of more than 1000 factory calibrated measurement ranges.
- The narrow 6 mm housing allows up to 165 units to be mounted per meter of DIN rail, without any air gap between units.
- Wide ambient temperature range of $-25...+70^{\circ}\text{C}$.

Connections

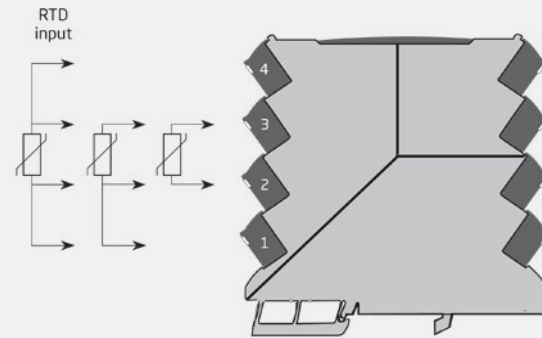

Safe Area or
Zone 2 & Cl. 1, Div. 2, gr. A-D

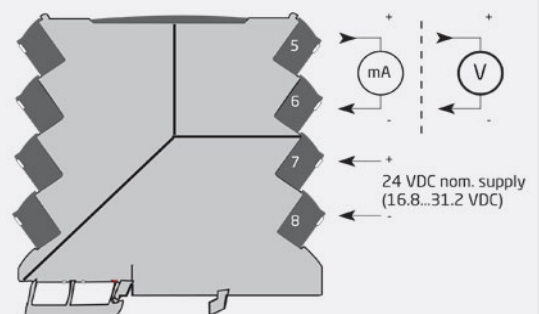

For pricing or any further information, please contact Omni Instruments Ltd.

Order:

Type
3102

Environmental Conditions

Specifications range.....	-25°C to +70°C
Storage temperature.....	-40°C to +85°C
Calibration temperature.....	20...28°C
Relative humidity.....	< 95% RH (non-cond.)
Protection degree.....	IP20
Installation in.....	Pollution degree 2 & measurement / overvoltage cat. II

Mechanical specifications

Dimensions (HxWxD).....	113 x 6.1 x 115 mm
Weight approx.....	70 g
DIN rail type.....	DIN EN 60715/35 mm
Wire size.....	0.13 x 2.5 mm ² / AWG 26...12 stranded wire
Screw terminal torque.....	0.5 Nm
Vibration.....	IEC 60068-2-6 : 2007
Vibration: 2...25 Hz.....	±1.6 mm
Vibration: 25...100 Hz.....	±4 g

Common specifications

Supply

Supply voltage.....	16.8...31.2 VDC
---------------------	-----------------

Response time

Response time (0...90%, 100...10%).....	< 30 ms / 300 ms (selectable)
---	-------------------------------

Max. required power.....	0.7 W
Signal / noise ratio.....	> 60 dB
Programming.....	DIP-switches
Signal dynamics, input.....	23 bit
Signal dynamics, output.....	18 bit
Accuracy.....	Better than 0.1% of selected range
EMC immunity influence.....	< ±0.5% of span
Extended EMC immunity: NAMUR NE 21, A criterion, burst.....	< ±1% of span
Incorrect DIP-switch setting identification.....	0 V / 0 mA output; LED 0.5 s / 1 Hz

Input specifications

RTD input

Temperature range, Pt100.....	-200...+850°C
Min. measurement range (span).....	10°C
Accuracy: the greater of.....	Better than 0.1% of span or 0.2°C
Temperature coefficient: the greater of.....	0.02°C/°C or ≤ ±0.01%/°C
Sensor current.....	< 150 µA
Sensor cable resistance.....	< 50 Ω per wire
Effect of sensor cable resistance (3-/4-wire).....	< 0.002 Ω / Ω
Sensor error detection.....	Yes - selectable via DIP-switch
Broken sensor detection.....	> 800 Ω
Shorted sensor detection.....	< 18 Ω

Output specifications

Common output specifications

Updating time.....	10 ms
--------------------	-------

Current output

Signal range.....	0...23 mA
Programmable signal ranges.....	0 / 4...20 mA
Sensor error indication (0...20 mA).....	0 mA or 23 mA / OFF
Sensor error indication (4...20 mA).....	3.5 mA or 23 mA / acc. to NAMUR NE43 or OFF
Load (@ current output).....	≤ 600 Ω
Load stability.....	≤ 0.01% of span / 100 Ω
Current limitation @ low output load.....	< 60 mA peak / < 4 mA average

Voltage output

Programmable signal ranges.....	0/1...5 and 0/2...10 V
Sensor error indication.....	0 V / 10% above the max. / none
Load (@ voltage output).....	≥ 10 kΩ
Open output.....	< 18 V

Observed authority requirements

EMC.....	2014/30/EU
LVD.....	2014/35/EU
RoHS.....	2011/65/EU

Approvals

ATEX 2014/34/EU.....	KEMA 10ATEX0147 X, II 3 G Ex nA IIC T4 Gc
IECEx.....	KEM 10.0068X
FM.....	3041043-C
DNV-GL Marine.....	Stand. f. Certific. No. 2.4
GL.....	V1-7-2
EAC.....	TR-CU 020/2011
UL.....	UL 61010-1

For pricing or any further information, please contact Omni Instruments Ltd.

Contact Details:

Tel: +44 845 9000 601
Fax: +44 845 9000 602
Local Tel: 01382 443000
Email: info@omni.uk.com

Mailing Address:

Suite E, East Kingsway Business Centre,
Mid Craigie Trading Estate, Mid Craigie Road,
Dundee, DD4 7RH, UK