

## Temperature converter, loop-powered - isolated

### 3331

- Excellent accuracy, better than 0.05% of span
- Slimline housing of 6 mm
- Excellent EMC performance and 50/60 Hz noise suppression
- Selectable < 30 ms / 300 ms response time
- Pre-calibrated temperature ranges selectable via DIP-switches



#### Application

- The 3331 temperature converter measures a standard Pt100, TC J and K temperature sensor, and provides an isolated passive analog current output signal.
- High 2 port isolation provides surge suppression and protects the control system from transients and noise.
- The 3331 can be mounted in the safe area or in Zone 2 / Division 2 areas.
- Approved for marine applications.


#### Technical characteristics

- Flexibly loop powered by 5.5...35 VDC via connectors.
- < 30 ms fast response time with simultaneous sensor error detection when selected.
- Selectable 300 ms response time when signal dampening is needed.
- Selectable internal/external C.J.C.
- Excellent conversion accuracy in all available ranges, better than 0.05% of span.
- Meeting the NAMUR NE21 recommendations, the 3331 provides top measurement performance in harsh EMC environments.
- The device meets the NAMUR NE43 standard defining out of range and sensor error output values.
- All terminals are protected against overvoltage and polarity error.
- High galvanic isolation of 2.5 kVAC.
- Excellent signal/noise ratio of > 60 dB.


#### Mounting / installation / programming

- Selectable DIP-settings for easy configuration of more than 1000 factory calibrated measurement ranges.
- The narrow 6 mm housing allows up to 165 units to be mounted per meter of DIN rail, without any air gap between units.
- Wide ambient temperature range of -25...+70°C.

#### Applications

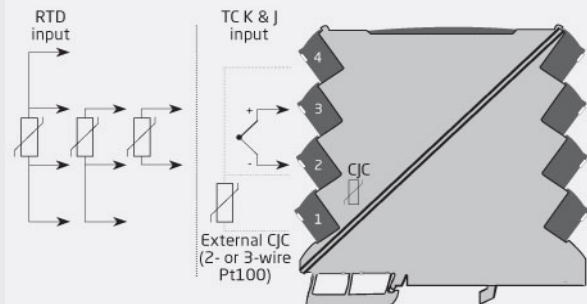

Safe Area or  
Zone 2 & Cl. 1, Div. 2, gr. A-D

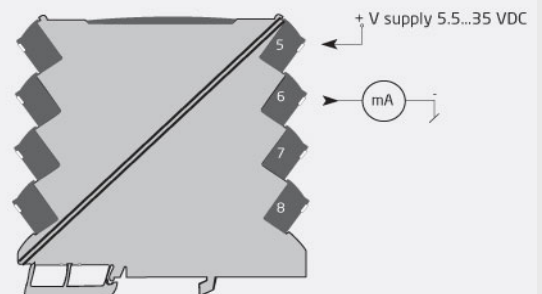

For pricing or any further information, please contact Omni Instruments Ltd.

#### Contact Details:

Tel: +44 845 9000 601  
 Fax: +44 845 9000 602  
 Local Tel: 01382 443000  
 Email: info@omni.uk.com

#### Mailing Address:

Suite E, East Kingsway Business Centre,  
 Mid Craigie Trading Estate, Mid Craigie Road,  
 Dundee, DD4 7RH, UK



**Order:**

Type
3331

**Environmental Conditions**

Operating temperature.....	-25°C to +70°C
Storage temperature.....	-40°C to +85°C
Calibration temperature.....	20...28°C
Relative humidity.....	< 95% RH (non-cond.)
Protection degree.....	IP20
Installation in.....	Pollution degree 2 & measurement / overvoltage cat. II

**Mechanical specifications**

Dimensions (HxWxD).....	113 x 6.1 x 115 mm
Weight approx.....	70 g
DIN rail type.....	DIN EN 60715/35 mm
Wire size.....	0.13 x 2.5 mm <sup>2</sup> / AWG 26...12 stranded wire
Screw terminal torque.....	0.5 Nm
Vibration.....	IEC 60068-2-6
2...25 Hz.....	±1.6 mm
25...100 Hz.....	±4 g

**Common specifications**

<b>Supply</b>	
Supply voltage.....	5.5...35 VDC
Internal power dissipation.....	19 mW...0.8 W

**Isolation voltage**

Isolation voltage, test / working.....	2.5 kVAC / 300 VAC (reinforced)
Zone 2 / Div. 2.....	250 VAC

**Response time**

Response time (0...90%, 100...10%).....	< 30 ms / 300 ms (selectable)
---	-------------------------------

Voltage drop.....	5.5 VDC
Signal / noise ratio.....	> 60 dB
Programming.....	DIP-switches
Signal dynamics, input.....	23 bit
Signal dynamics, output.....	18 bit
EMC immunity influence.....	< ±0.5% of span
Extended EMC immunity: NAMUR NE 21, A criterion, burst.....	< ±1% of span
Incorrect DIP-switch setting identification.....	3.5 mA

**Input specifications**

**RTD input**

Temperature range, Pt100.....	-200...+850°C
Min. measurement range (span).....	10°C
Accuracy: the greater of.....	Better than 0.05% of span or 0.1°C

Temperature coefficient: the greater of.....	0.02°C/°C or ≤ ±0.01%/°C
Sensor current.....	< 150 µA
Sensor cable resistance.....	< 50 Ω per wire
Effect of sensor cable resistance (3-/4-wire).....	< 0.002 Ω / Ω
Sensor error detection.....	Yes - selectable via DIP-switch
Broken sensor detection.....	> 800 Ω
Shorted sensor detection.....	< 18 Ω

**TC input**

Temperature range, TC J.....	-100...+1200°C
Temperature range, TC K.....	-180...+1372°C

**Min. measurement range (span)**

- TC J & K.....	50°C
Accuracy: the greater of.....	Better than 0.05% of span or 0.5°C

**Temperature coefficient: the greater of.....**

.....	0.1°C/°C or ≤ ±0.01%/°C
-------	-------------------------

Sensor cable resistance..... < 5 kΩ per wire

**Cold junction compensation (CJC): Accuracy @ external**

Pt100 input.....	Better than ±0.15°C
------------------	---------------------

**Cold junction compensation (CJC): Accuracy @ internal**

CJC.....	Better than ±2.5°C
----------	--------------------

Internal CJC error detection..... Yes

External CJC error detection..... Yes - selectable via DIP-switch

Open Thermocouple detection..... Yes - selectable via DIP-switch

**Output specifications**

**Common output specifications**

Updating time.....	10 ms
--------------------	-------

**Current output**

Signal range.....	0...23 mA
Programmable signal ranges.....	4...20 and 20...4 mA
Load (@ current output).....	≤ (Vsupply - 5.5) / 0.023 [Ω]
Load stability.....	≤ 0.01% of span / 100 Ω

Sensor error indication..... 3.5 mA or 23 mA / acc. to NAMUR NE43 or OFF

**Observed authority requirements**

EMC.....	2014/30/EU
LVD.....	2014/35/EU
RoHS.....	2011/65/EU

**Approvals**

ATEX 2014/34/EU.....	KEMA 10ATEX0147 X
IECEx.....	KEM 10.0068X
FM.....	FM17US0004X / FM17CA0003X
DNV-GL Marine.....	Stand. f. Certific. No. 2.4
DNV-GL Marine.....	V1-7-2
EAC.....	TR-CU 020/2011
UL.....	UL 61010-1

For pricing or any further information, please contact Omni Instruments Ltd.

**Contact Details:**

Tel: +44 845 9000 601  
 Fax: +44 845 9000 602  
 Local Tel: 01382 443000  
 Email: info@omni.uk.com

**Mailing Address:**

Suite E, East Kingsway Business Centre,  
 Mid Craigie Trading Estate, Mid Craigie Road,  
 Dundee, DD4 7RH, UK