



The MTN/VM220 is a compact, rechargeable, portable handheld Vibration Meter designed to conform to ISO10816-3 and operate with a constant current accelerometer providing an accurate vibration measurement. Features comprise of the ability to store up to 100 time-stamped readings, including; RMS, peak, peak-peak, crest factor and bearing conditions all on an easy to read vibrant colour LCD display.

MTN/VM220



Features

- Rechargeable Lithium-ion battery with worldwide charger
- Switchable low pass filter
- User-selectable units
- High visibility colour LCD display.
- RMS, peak, peak-peak, crest factor readings in acceleration, velocity or displacement modes
- Bearing condition modes (acceleration and velocity)
- 100 memories can store vibration and time/date
- Industrial rubber case
- Adaptive amplifier for high accuracy
- AC output
- Audio output for listening to vibration directly
- Supplied with MTN/2200 probe sensor, others available.

Specifications

Measurement ranges

Acceleration	20g
Velocity	200mm/s
Displacement	2000 μ m
<i>Different ranges available</i>	

Modes	RMS Peak Peak-peak Crest factor Bearing acceleration Bearing velocity
-------	--

ISO10816-3

- 8 modes for machine classes I, II, III, IV, rigid/fixed foundations
- Visual indication of machine status:

	<i>Unacceptable</i>
	<i>Unsatisfactory</i>
	<i>Satisfactory</i>
	<i>Good</i>

Frequency range

Low pass filters	1kHz, 5kHz, 10kHz
Band-pass filter	1-10kHz

Carrying case






Dimensions



VM220 colour display

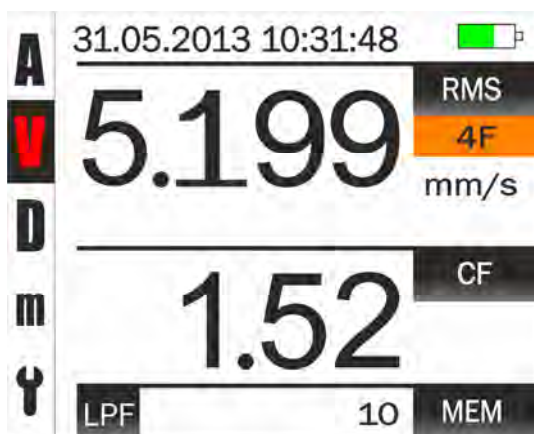

Units

Acceleration	g, m/sec ²
Velocity	mm/sec, in/sec
Displacement	µm, mils

Display

Type	TFT 16bit colour
Resolution	160 x 128
Viewing angle	100°
Viewable size	35 x 28mm

Memory

Size	100 slots storing vibration, time, date, filter, units, crest factor
------	--

Connections

Power	USB mini-B
Headphones/AC signal	3.5mm stereo
Sensor	4 pin Lumberg

Environmental

Operating temperature	0 to +45°C
Storage temperature	-20 to +60°C

Power

Charger	100-240V/5V 1A USB with 4 adaptors
---------	------------------------------------

Battery	Li-ion 3.7V
---------	-------------

Battery life	>20 hours
--------------	-----------

Power status	Battery icon indicates charging status, battery level
--------------	---

Dimensions

Size (L x W x H)	130 x 78 x 28mm
------------------	-----------------

Accessories

MTN/VM220	Vibration meter
MTN/2100-X	Probe
MTN/MM001	Magnet
MTN/PS002	4" ¼"-28UNF Spike
MTN/CA476	Coiled sensor cable
MTN/CA477	USB A to mini USB B cable
MTN/BT004	Worldwide adaptor with 4 adaptors
MTN/HE016	Carry case
MTN/HB039	Handbook

For pricing or any further information, please contact Omni Instruments Ltd.

Contact Details:

Tel: +44 845 9000 601
 Fax: +44 845 9000 602
 Local Tel: 01382 443000
 Email: info@omni.uk.com

Mailing Address:

Suite E, East Kingsway Business Centre,
 Mid Craigie Trading Estate, Mid Craigie Road,
 Dundee, DD4 7RH, UK