

Software Free, Temperature Data Logging Solutions


- 4 data loggers for monitoring Chilled Goods, Frozen Goods Ripening Goods and Ambient Pharmaceutical.
- Custom cumulative alarm versions of each logger available if required.
- No set-up required. One button press-to-start logging.
- Pre-configured with appropriate sample rates, alarm thresholds and cumulative alarms for each application.
- No software required. Results appear in an automatically generated PDF file.

Each of the four PDF loggers comes pre-configured for use in your particular application – simply press the Start button to begin logging. Pressing the Status button will light up the status LEDs to give a quick indication of whether the temperature has exceeded an alarm condition at any point. Once your session has been completed, press and hold the Start/Stop button to stop the log, tear open the IP67-rated plastic wallet to reveal the USB connector and plug into your PC. Copy the file off the device as if it were a memory stick.



YOUR EL-PDF-1

- 1 Start/Stop button
- 2 Status/Mark button
- 3 Status LEDs
- 4 USB connector
- 5 Tear to open
- 6 Mounting point
- 7 Model type

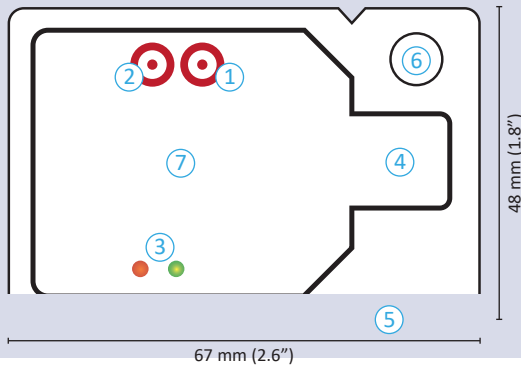

CUSTOM CONFIGURATIONS

This unit can be quickly customised for use in multiple markets. If you have a specific monitoring application, call us today.

SPECIFICATIONS

Measurement range	-30 to +60°C (-22 to +140°F)
Accuracy (overall error)	±0.5°C maximum (±1°F)
Resolution	0.1°C (0.1°F)
Battery Life	12 months (minimum)
IP Rating	IP67*
Readings	32,600

* The data logger is protected against moisture to IP67 standard when housed in an EL-CC-BAG or equivalent.

INCLUDED IN THE BOX

EL-PDF-1 X10 Data Loggers with integral battery

ACCESSORIES

EL-CC-BAG Pack of 5 waterproof bags for data logger re-use.

MODEL SPECIFIC

	Chilled Goods	Frozen Goods	Ripening Goods	Ambient Pharma
High Alarm Level	8°C	-16°C	14°C	25°C
Low Alarm Level	2°C	-20°C	12°C	8°C
Cumulative Alarms Level	Available Upon Request	Available Upon Request	Available Upon Request	Available Upon Request
Logging Interval	10 minutes (220 days)	10 minutes (220 days)	10 minutes (220 days)	10 minutes (220 days)
Part Number	EL-PDF-1-001 PK10	EL-PDF-1-002 PK10	EL-PDF-1-003 PK10	EL-PDF-1-004-PK10

For pricing or any further information, please contact Omni Instruments Ltd.

Contact Details:

Tel: +44 845 9000 601
 Fax: +44 845 9000 602
 Local Tel: 01382 443000
 Email: info@omni.uk.com

Mailing Address:

Suite E, East Kingsway Business Centre,
 Mid Craigie Trading Estate, Mid Craigie Road,
 Dundee, DD4 7RH, UK