


CG-3DI CLICKNGO MODULE 3 DIGITAL INPUTS

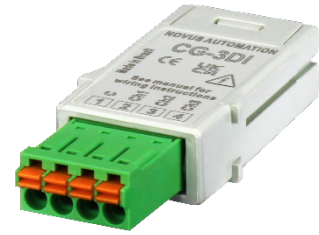

DATASHEET – V1.0x B

INTRODUCTION

CG-3DI ClickNGo module has 3 digital inputs (DI) and was designed to work as an expansion module for **NOVUS** line of modular controllers.

CG-3DI must be attached to the controller dock (to insert the module to the controller, make sure the device is turned off). Once inserted, it will be automatically recognized. Its configuration parameters will be displayed according to the slot in which the module has been attached to the dock.

You can configure this module directly at the controller, through the **QuickTune** software, or through the **QuickTune Mobile**.

DIMENSION

Built in UL94 polycarbonate and with an IP20 protection rating, the **CG-3DI** ClickNGo module has an identification engraving on the top and the following dimensions:

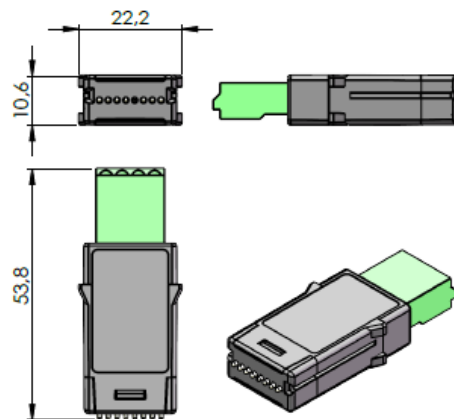


Figure 1 – Module overview

ELECTRICAL INSTALLATION

CG-3DI uses 1 plug-in connector and supports connections to PNP and NPN / Dry Contact sensors, as shown in the figures below:

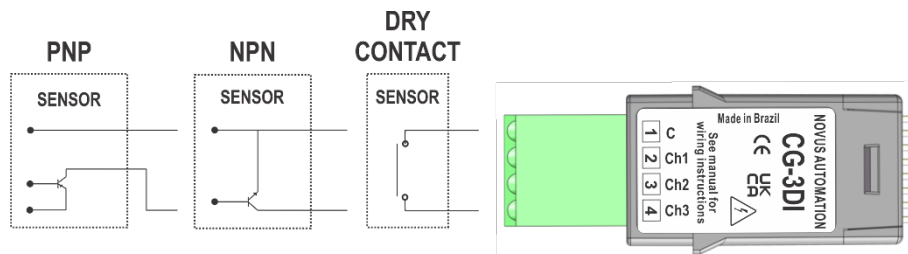


Figure 2 – Electrical connections

INSTALLATION RECOMENDATIONS

- The electrical connections must be made at the module's terminals and accept 0.32 to 2.5 mm² (28 to 11 AWG) wire. The terminals must have a torque of 0.45 Nm (4.0 lb in).
- The power supply for electronic instruments must come from a network suitable for instrumentation.
- The use of RC FILTERS (noise suppressors) in contactor coils, solenoids, etc. is recommended.
- In control applications, you must consider what can happen when any part of the system fails. The built-in safety features of the device do not guarantee total protection.

HOW TO INSERT THE MODULE TO THE DEVICE



Before you insert or remove a ClickNGo module from the device, make sure the device has been turned off.

Once the dock has been attached to the controller, simply plug the **CG-3DI** ClickNGo module into the desired slot, pressing it in until it clicks into place. If the module does not click into place, it is either not properly attached, or it has been plugged into the wrong slot.

Once the **CG-3DI** ClickNGo module is inserted into the dock and the device has been turned on, it will be automatically recognized. You can use the navigation keys to go through the parameter cycles and access the settings of the added module (see OPERATION section of the device manual).

The module settings will be available in the parameter cycle and according to its position in the dock. A **CG-3DI** ClickNGo module inserted into slot 1 of the dock, for example, can be viewed within the Configuration Cycle, under module 1 (**CFG >> Md. 1**).

Once a module is removed from the dock, it will no longer be recognized by the device and the any settings made will be lost.

MODULE OPERATION

Once the module has been attached to the device, the controller will display the following parameters:

Md.x	<p>Allows you to select the digital channel (Ch.x) of the CG-3DI ClickNGo module to be configured:</p> <p>Ch 1 Channel 1 selected.</p> <p>Ch 2 Channel 2 selected.</p> <p>Ch 3 Channel 3 selected.</p>
Ch.Fu <i>Channel Function</i>	<p>Allows you to set the function of the selected channel:</p> <p>OFF Channel is off and will not be used by the application.</p> <p>RUN When the DI is enabled, this function enables the controller operation (RUN = YES).</p> <p>Auto When the DI is enabled, the controller enters the manual operation mode (CRt = MAN).</p> <p>E.RSP When the DI is enabled, the controller adopts a remote Setpoint.</p> <p>P.STP When the DI is enabled, the <u>running</u> ramps and soaks program will be suspended.</p> <p>Pr 1 When the DI is enabled, the ramps and soaks program 1 (P1) starts running.</p> <p>EMR Defines the channel as a trigger Digital Input for Timer T1.</p>
TYPE <i>Channel Type</i>	<p>Allows you to set the type of sensor to be used in the channel:</p> <p>NPN (Dry Contact)</p> <p>PNP</p>

Table 1 – Module parameters

The parameters will be displayed in the cycle related to the position of the module in the device dock.



If the module is removed from the controller dock, all settings will be lost. Therefore, when possible, use QuickTune software or the QuickTune Mobile application to save a version of the settings you have made.

For more information on the controller primary operation, see the OPERATION chapter of the device manual.

CONFIGURATION SOFTWARE

Once you have inserted the **CG-3DI ClickNGo** module into the device dock, you can configure it using the **QuickTune** software, which is free and available for download on **NOVUS** official website, or the **QuickTune Mobile** app, which is also free and available on Google Play Store and Apple Store.

Information about the primary configuration of the device is available in the CONFIGURATION SOFTWARE chapter of the controller manual. **This section shows information on how to configure the parameters for this module.**

To start the configuration, simply click the **Configure** button on the home screen of the software or application. If you are using the **QuickTune Mobile** application, you must enable the Bluetooth interface of your smartphone. If you are using the **QuickTune** software, you must run the software and perform the process of identifying the device.

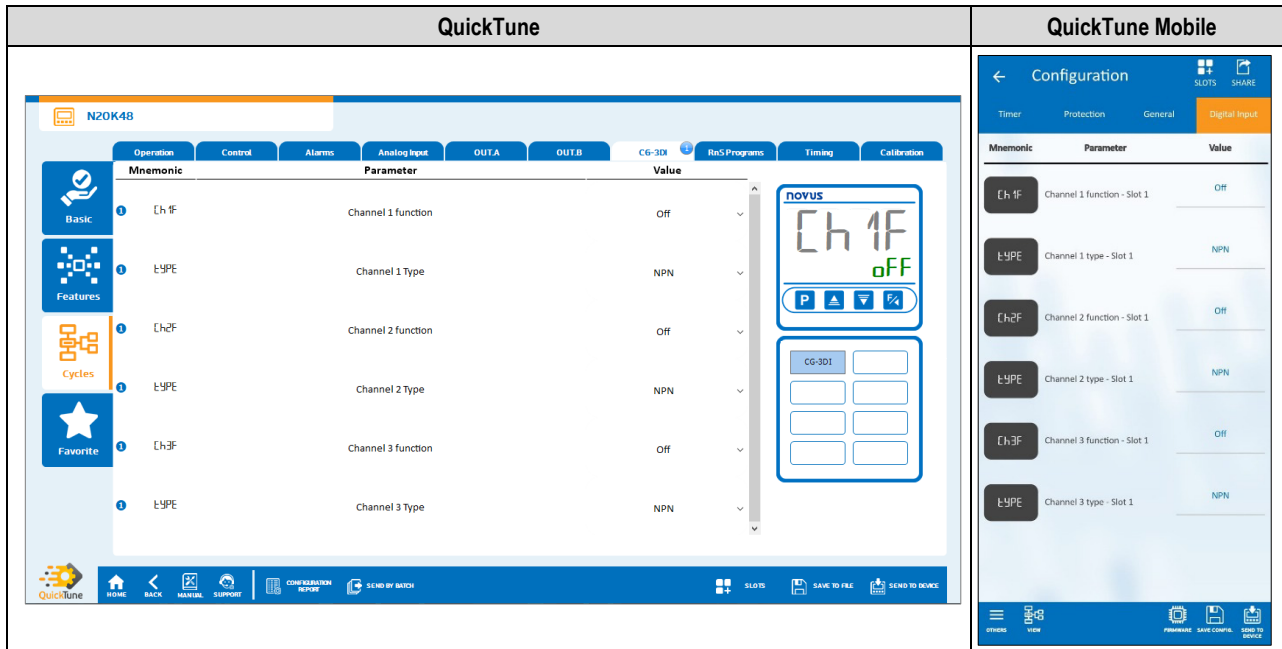


Figure 3 – Configuration software

- **Function within the process to which the channel 1 has been assigned:** Allows you to set the function of channel 1: "Channel off", "Enable controller operation", "Enables automatic control mode", "Enables remote Setpoint", "Pauses the program", "Selects program 1" or "Starts timer".
- **Channel Type 1:** Allows you to define the type of sensor to be used: PNP or NPN.
- **Function within the process to which the channel 2 has been assigned:** Allows you to set the function of channel 1: "Channel off", "Enable controller operation", "Enables automatic control mode", "Enables remote Setpoint", "Pauses the program", "Selects program 1" or "Starts timer".
- **Channel Type 2:** Allows you to define the type of sensor to be used: PNP or NPN.
- **Function within the process to which the channel 3 has been assigned:** Allows you to set the function of channel 1: "Channel off", "Enable controller operation", "Enables automatic control mode", "Enables remote Setpoint", "Pauses the program", "Selects program 1" or "Starts timer".
- **Channel Type 3:** Allows you to define the type of sensor to be used: PNP or NPN.

MAINTENANCE

Connection errors and improper programming are the most common errors during controller operation. A final review can avoid wasted time and damage.

If the module is not recognized by the device, you must remove it from the dock, add it to another available slot, and restart the device.

TECHNICAL SPECIFICATION

FEATURES	CG-3DI CLICKNGO MODULE		
Digital Input	Logical Level	PNP	It will be triggered with logical level 1 Logical Level "0": < 0.5 V Logical Level "1": > 3 V
		NPN	It will be triggered with logical level 0 Logical Level "0": < 0.5 V Logical Level "1": > 3 V
		Dry Contact	It triggers the DI when using a closed contact
	Maximum Voltage accepted	30 Vdc	
	Input Impedance	> 270 kΩ	
	Input Current @ 30 Vcc (typical)	< 0.15 mA	
	Maximum Frequency (square wave)	Dry Contact: 10 Hz NPN: 30 Hz PNP: 30 Hz	
Response Time	15 ms when one module is installed on the rack. Up to 30 ms when all the positions on the rack are used by the modules.		
Environmental Conditions	Operating Temperature: -20 to 60 °C (-4 to 140 °F) Relative Humidity: 80 % max. @ 30 °C (86 °F) (For temperatures above 30 °C (86 °F), reduce by 3 % for each °C) Internal use; Installation category II, Pollution degree 2; Altitude < 2000 m		
Electrical Compatibility	EN 61326-1:2020		
Security	EN 61010-1:2010 UL 61010-1/A2:2012		
Dimension	53,8 x 10,6 x 22,2 mm Approximated weight: 10 g		
Housing Protection Degree	IP50 when installed in the controller.		
Housing Plastic material	ABS+PC UL94 V-0		
Configurator Software	QuickTune (for PC) QuickTune Mobile (for smartphones)		
Certification	CE, UKCA		

Table 2 – Technical specifications

CERTIFICATIONS

CE Mark / UKCA

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

WARRANTY

Warranty conditions are available on our website.

Whilst every effort has been made to ensure the accuracy of this specification, we cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.

For pricing or any further information, please contact Omni Instruments Ltd.



Measurement and data acquisition solutions

Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address: Unit 1, 14 Nobel Road,
Wester Gourdie Industrial Estate,
Dundee, DD2 4UH.