

Senturion XPR08 Proximity Probe



Applications

- Machine Shaft Position
- Turbine Differential Expansion
- Harsh Environments

Features

- Switch selectable system cable lengths 5m, 7m and 9m.
- LED indication of selected length.
- 3.5mm socket for gap voltage monitoring.
- Double screened cable for high noise immunity.
- Snap lock and shake proof cable connection.
- Excellent repeatability on replacement of probe, extension or driver.
- Compliant with standard API 670.

The XPR08 proximity probe system consists of a calibrated probe, extension cable and driver. Utilising the eddy current principle, this combination forms a tuned circuit with the target material and variations in probe face to target distance are detected in this circuit by the driver. This provides a linearised voltage output proportional to target gap with a nominal sensitivity of 1.97 mV/um and a range of up to 8.0 mm. This type of measurement system provides highly accurate (resolution typically to a few micro-meters) relative positional measurements, for harsh environments up to 180 °C.

The driver unit offers selectable system lengths of 5 m, 7 m or 9 m, with a front panel green LED indicating the selected option. The gap voltage monitoring socket assists with commissioning the probe system; a volt meter can be connected directly to the driver through the 3.5 mm standard audio socket to display the gap voltage at the point of installation and the probe mechanical gap can then be adjusted to suite the application.

The cable system incorporates snap lock connectors which require no torqueing and provide a shake proof solution important for heavy industrial applications. The double screened cable offers robustness in combination with high immunity to interference and optional stainless steel convoluted armour is available for applications or environments where cable protection is paramount.

For pricing or any further information, please contact Omni Instruments Ltd.



Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address: Unit 1, 14 Nobel Road,
Wester Gourdie Industrial Estate,
Dundee, DD2 4UH.

System Performance


Measurement Range:	8.0 mm
Linear Range:	0.5 mm (20 mil) to 8.5 mm (335 mil) from electrical null position.
Electrical null position:	Approximately 0.20 mm from target (Driver at 0 V).
Linearity: (% of FS)	± 1%, -1.5 V to -17.5 V ± 2%, -1.0V to -17.5 V ± 2%, 0 °C to +150 °C @ -10.0V
Std Sensitivity:	1.97 V/mm (50 mV/mil) ± 1 %
Resolution:	<0.002 mm
Interchangability:	Maximum interchangability error replacing either probe, extension cable or driver in calibrated system is ± 5 %.
Available system lengths:	5 m, 7 m and 9 m
Cable length tolerance	
Probe (1 metre):	1.0 m to 1.5 m
Cable Extension (4 metre):	4.0 m to 4.4 m
Cable Extension (6 metre):	6.0 m to 6.6 m
Cable Extension (8 metre):	8.0 m to 8.8 m
Frequency Response:	DC to 5 kHz
Maximum Cable Length:	330 m based on 120 pF/m at <10 kHz and 500 um pk-pk. 3000 m based on 120 pF/m at <1 kHz and 500 um pk-pk.
Reference Target Material:	ANSI 4140

Probe

Probe tip diameter:	20.0 mm
Probe tip material:	PPS 40 % Glass Filled
Probe body material:	303 stainless steel
Probe body format:	Straight Type
Cable type:	Triaxial 75 Ohm Coaxial FEP outer jacket 3.2 mm outer diameter
Armoured option:	Convuluted Stainless Steel 6.4 mm outer diameter
Probe Resistance:	1.1 Ohms ± 0.2 Ohm With 1.0 m cable
Operating Temp Range:	-30 °C to +180 °C
Storage Temp Range:	-40 °C to +180 °C
Minimum target size:	2 x probe tip diameter
Magnetic field effect:	<1 % at 110 mT
Connector	Female Miniature Coaxial


Driver

Linear voltage range: Standard Option	-2.0 V to -18.0 V for 0.50 mm (20 mil) to 8.5 mm (335 mil)
System length selection:	Internal switch 5 m, 7 m or 9 m
System length indication:	Green LED lamp
Power supply range:	-16.0 Vdc to -28.0 Vdc Note: Output voltage is limited to 1.2 V below supply voltage when supply is < -21.5 V.
Power supply: sensitivity	< 0.3 mVout / Vsupply
Power consumption:	3 mA typ, 7 mA max
Output impedance:	75 Ohms
Monitor Output Impedance:	10 KOhm
Sensor Connector type:	Self Locking Miniature Male Coaxial
Monitor Connector type:	3.5 mm audio jack
Mounting:	Din Rail or Plate
Mass:	250 grams
Operating Temp Range:	-30 °C to +90 °C
Storage Temp Range:	-40 °C to +90 °C

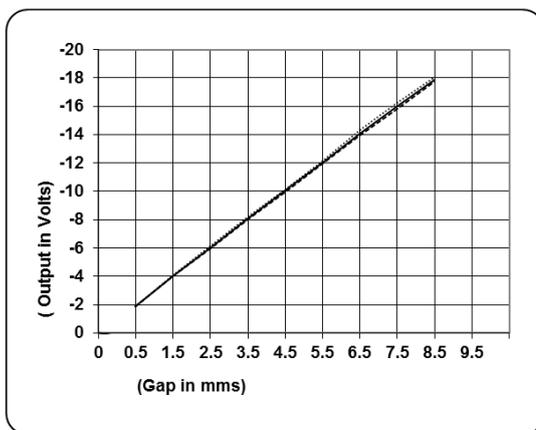


Typical 5m system performance

— 25 °C
..... 150 °C
- - - 0 °C

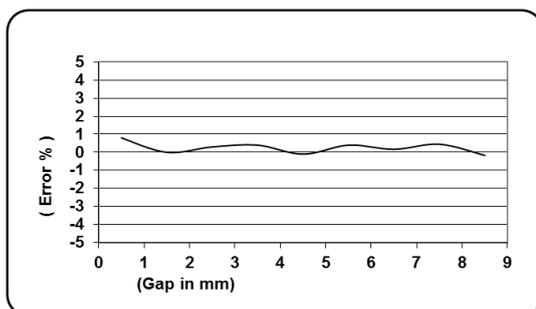

Typical 5m system performance

Probe Ordering Information

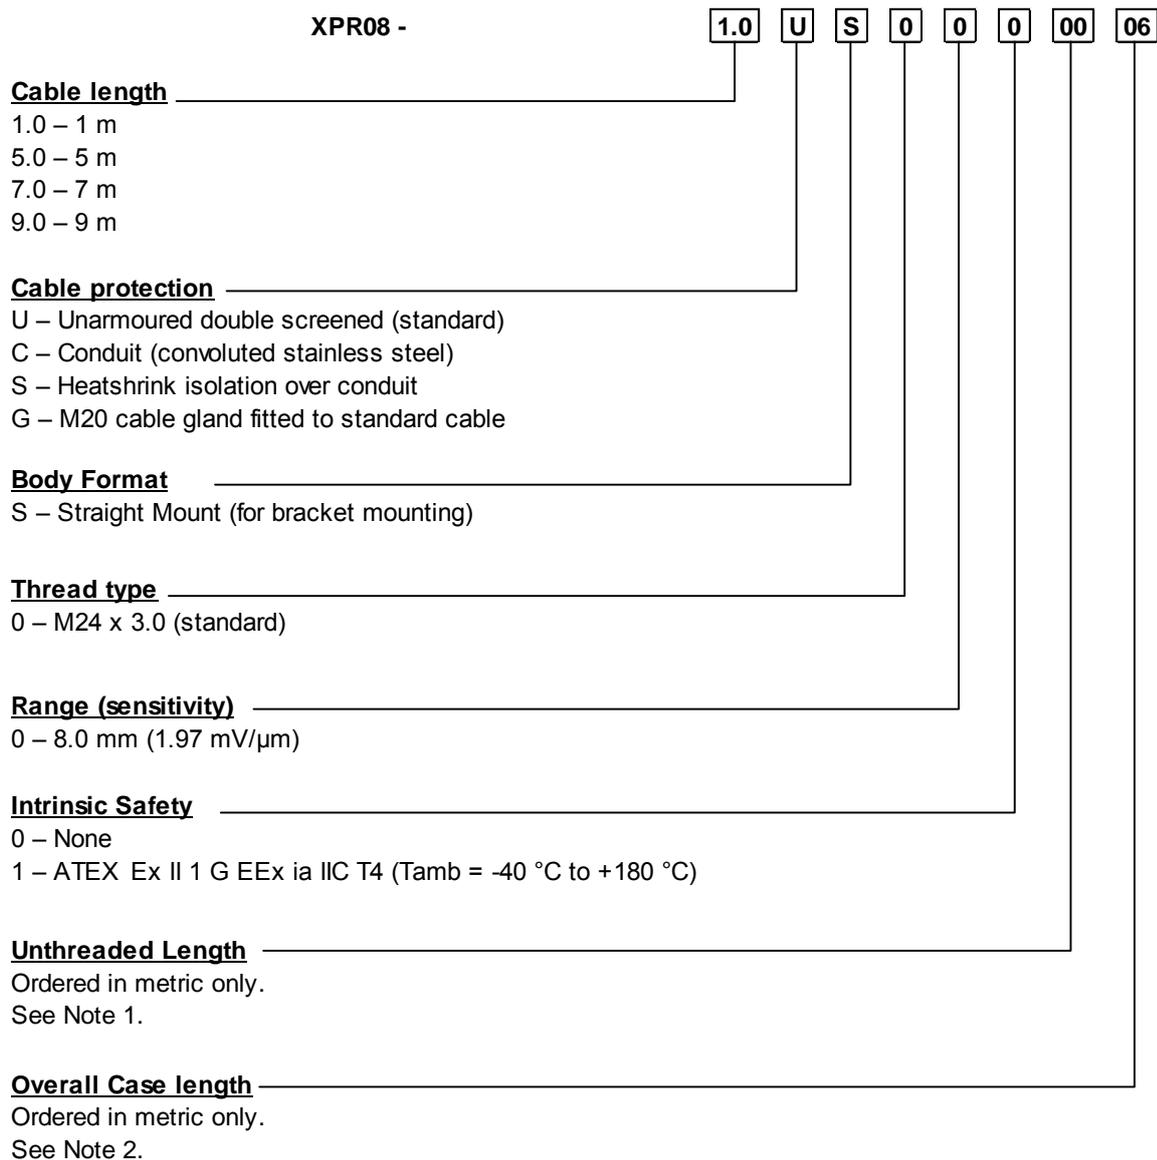

Note 1 - Unthreaded Length Option

Metric Case

Unthreaded length must be at least 20 mm less than the case length. Order in increments of 10 mm.
 Maximum unthreaded length: 230 mm.
 Minimum unthreaded length: 0 mm.
 Example: 06 = 60 mm.

Note 2 - Overall Case Length Option

Metric Case

Order in increments of 10 mm.
 Maximum length: 250 mm.
 Minimum length: 50 mm.
 Example: 08 = 80 mm.

Driver Ordering Information

XED08 -

U 0 0

System length

U – Universal Driver for 5m, 7m and 9m systems (standard)
S – Special requirements (2m, 14m, etc)

Range (sensitivity)

0 – 8.0mm (1.97mV/μm)

Intrinsic Safety

0 – None
1 – ATEX Ex II 1 G EEx ia IIC T4 (Tamb = -40°C to +80°C)

Extension Cable Ordering Information

XEC -

4.0 U 0

Cable length

4.0 – 4m
6.0 – 6m
8.0 – 8m




Cable protection

U – Unarmoured double screened (standard)
C – Conduit (Convoluted SS)


Intrinsic Safety

0 – None
1 – ATEX Ex II 1 G EEx ia IIC T4 (Tamb = -40°C to +180°C)


Driver Mechanical Configuration

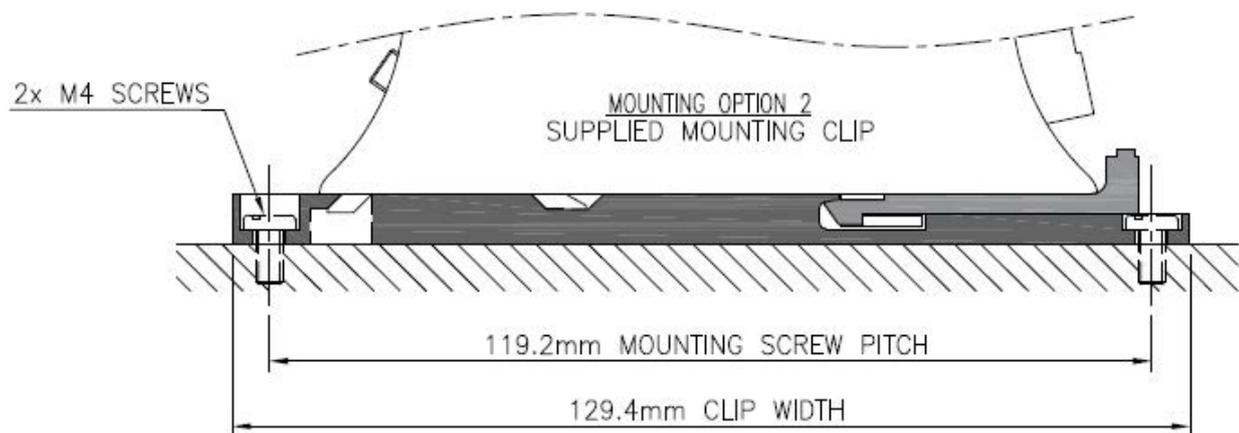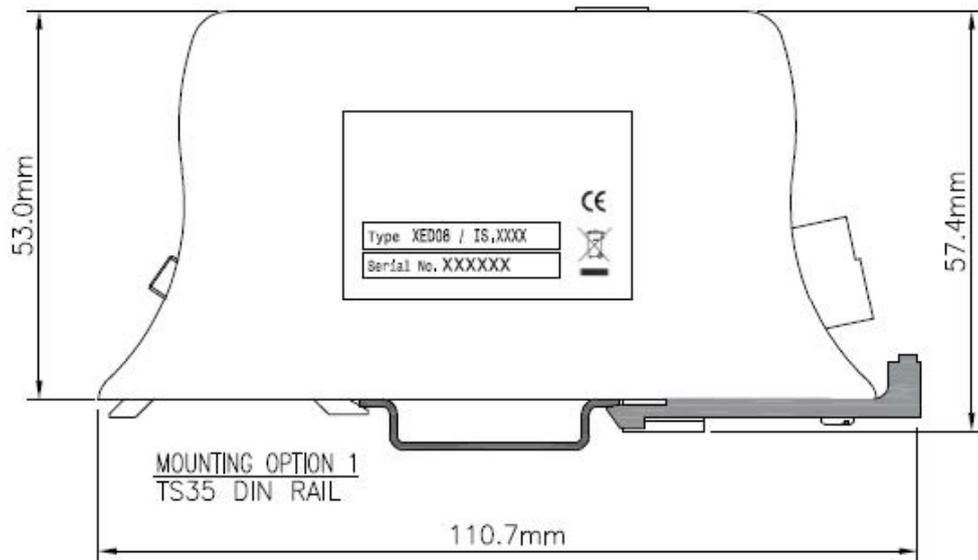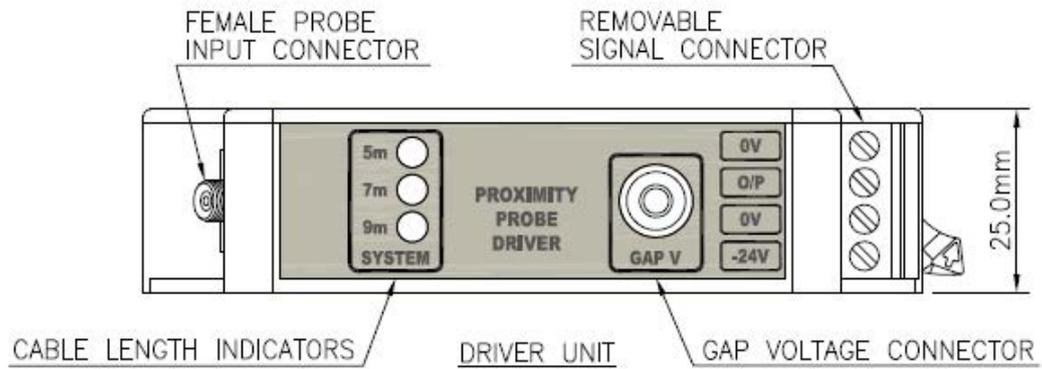

Probe Mechanical Configuration

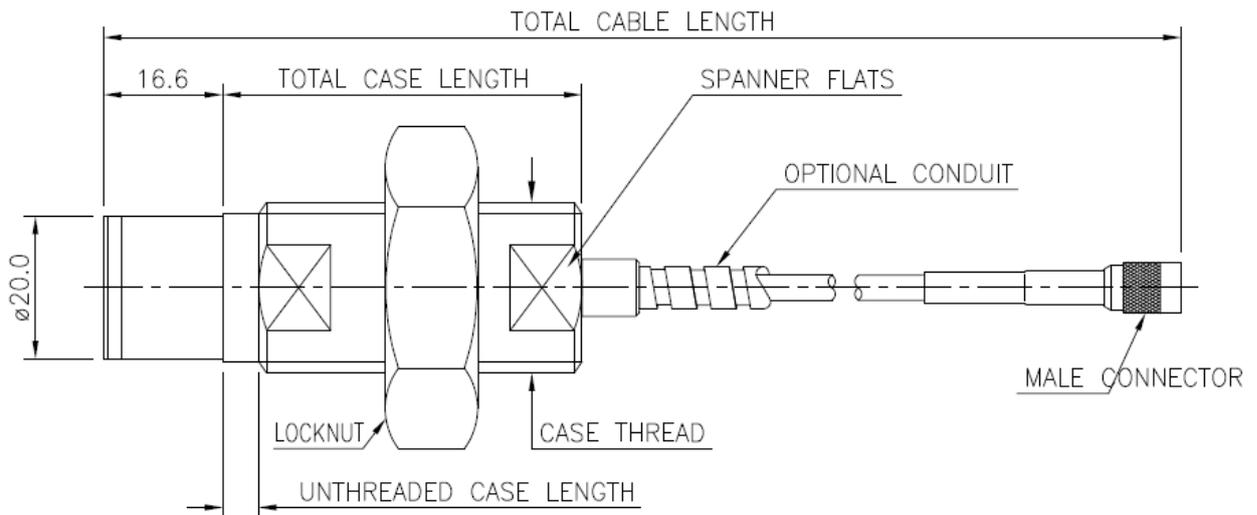

Extension Cable Mechanical Drawing

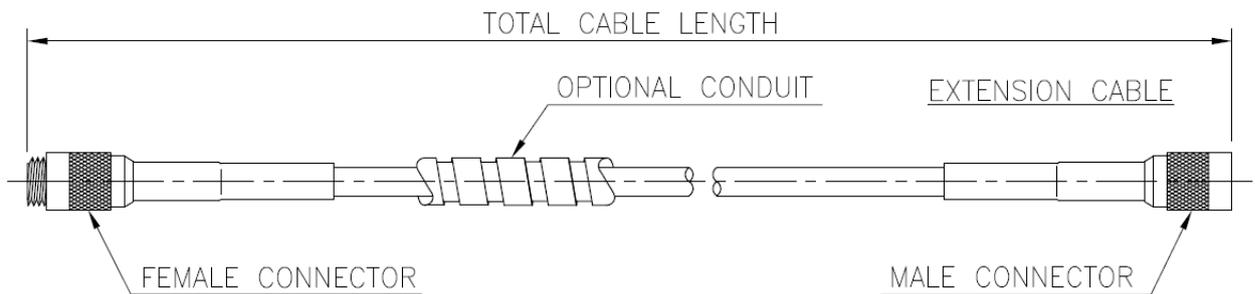

FM26920

Whilst every effort has been made to ensure the accuracy of this specification, we cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.

For pricing or any further information, please contact Omni Instruments Ltd.



Measurement and data acquisition solutions

Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address:

Unit 1, 14 Nobel Road,
Wester Gourdie Industrial Estate,
Dundee, DD2 4UH.