

MICROCAL SIMULATORS

- Test thermocouple type K, J, T, R, N, S & E thermometers
- For frequent checking of thermometer accuracies
- 12 adjustable or 23 fixed temperature points
- 4 models available – Simulator or Simulator/thermometer



The MicroCal thermocouple simulators help ensure that the frequent checking of thermometer accuracies are a routine operation. These instruments are designed to simulate a chosen temperature to test thermocouple thermometers without the need for specialised equipment or conversion tables. The MicroCal 1 Plus also measures and simulates temperature.

The MicroCal 1, MicroCal 1 Plus & the MicroCal 2 have 12 preset temperatures for type K thermocouple -20, -10, 0, 10, 30, 50, 100, 195, 250, 500, 800 and 1000 °C, any of these temperatures can be modified and saved by the user. The factory default temperatures can be recalled at any time.

The MicroCal 3 has 23 fixed temperature points for type K thermocouple -100, -50, -20, -10, 0, 10, 20, 30, 40, 50, 60, 80, 100, 150, 195, 250, 300, 400, 500, 600, 800, 1000 and 1200 °C.

All models feature a custom 10 mm LCD display with alpha-numeric display line to prompt the user when changing parameters. Selectable parameters include; °C/°F, auto-power-off - enable/disable, CJC - internal/external and display contrast adjustment.

Each MicroCal is supplied with a one metre PVC thermocouple lead with miniature thermocouple connectors and a five-point UKAS Certificate of Calibration. Each certificate indicates deviations from standards at the various points.

An optional lead set is available for the MicroCal 1 and MicroCal 1 Plus comprising of six leads, one for each thermocouple type K, J, T, R/S, N and E.


Thermocouple type K	Range -200 to 1372 °C
Thermocouple type J	Range -200 to 1200 °C
Thermocouple type T	Range -270 to 400 °C
Thermocouple type R	Range 0 to 1768 °C
Thermocouple type N	Range -200 to 1300 °C
Thermocouple type S	Range 0 to 1768 °C
Thermocouple type E	Range -140 to 1000 °C



Incorporates a foot stand



Lead Set (6 leads)
816-100

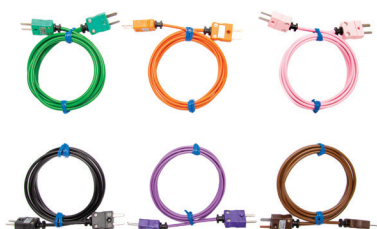

Order code	Description
271-100	MicroCal 1
271-101	MicroCal 1 Plus
271-200	MicroCal 2 - type K
271-210	MicroCal 3 - type K
816-100	Lead set (6 leads)
830-205	Protective silicone cover
832-115	Acrylic wall bracket



0601



Specification	MicroCal 1 & 1 Plus	MicroCal 2	MicroCal 3
Range	(see table above)		
Temp points	12 adjustable presets	12 available	23 fixed presets
Accuracy	±0.3 °C (dependant upon tc type)	±0.3 °C	±0.5 °C
Battery	2 x 1.5 volt AAA		
Battery life	300 hours		
Sensor type	Thermocouple type K, J, T, R, N, S & E (selectable)	Dedicated type K thermocouple	
Display	Custom LCD		
Dimensions	35 x 73 x 141 mm		
Weight	175 grams		
5-point UKAS Certificate of Calibration included			

For more information on the above simulators please visit our website or contact our sales office.



Measurement and data acquisition solutions

Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address: Unit 1, 14 Nobel Road,
Wester Gourd Industrial Estate,
Dundee, DD2 4UH.