

Tinytag Talk 2 Temperature Logger (-40 to +85°C)

TK-4014

Issue 6

9th August 2019
E&OE

Tinytag Talk 2s are compact, lightweight, economical loggers housed in a 35mm film canister.

These loggers are used in a wide range of applications including fridge monitoring, building condition monitoring and academia.

The TK-4014 is self contained with an internal temperature sensor.

Popular Applications

- Building condition monitoring
- Pharmaceutical storage
- Dry food storage
- Museum display and repository



Features

- Temperature recorder
- 16,000 reading capacity
- High Accuracy
- High Reading Resolution
- Fast Data Offload
- 2 user-programmable alarms
- Low battery monitor
- User-replaceable battery



For pricing or any further information, please contact Omni Instruments Ltd.




Features

Total Reading Capacity	16,000 readings
Memory type	Non Volatile
Delayed Start	Relative / Absolute (up to 45 days)
Stop Options	When full After n Readings Never (overwrite oldest data)
Reading Types	Actual, Min, Max
Logging Interval	1 sec to 10 days
Offload	While stopped or when logging in minutes mode
Alarms	2 fully programmable; latching

Reading Specification

Reading Range	-40 °C to +85 °C (-40 °F to +185 °F)
Sensor Type	10K NTC Thermistor (Internally mounted)
Response Time	25 mins to 90% FSD in moving air
Reading Resolution	0.05 °C or better
Accuracy	

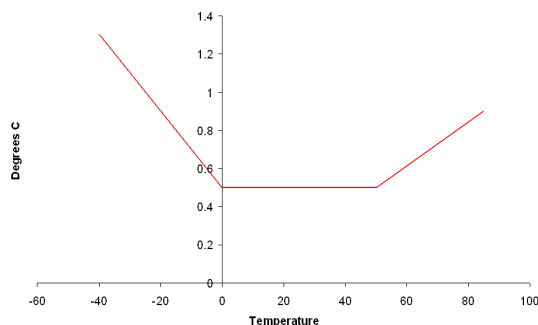

Physical Specification

IP Rating	IP54 (splash-proof)
Operational Range*	-40 °C to +85 °C (-40 °F to +185 °F)
Case Dimensions	
Diameter	34mm / 1.34"
Height	54mm / 2.13"
Weight	30g / 1.06oz

*The Operational Range indicates the physical limits to which the unit can be exposed, not the reading range over which it will record.

Notes

The battery fitted in this product is a single cell containing less than 1g of lithium and meets the requirements of the UN Manual of Tests and Criteria, Part III, Subsection 38.3.

Recommended Battery Types	SAFT LS14250, Tekcell SBAA02P or Eve ER14250
----------------------------------	--

The logger will operate with other 1/2AA 3.6V Lithium batteries but performance cannot be guaranteed.

Replacement Interval	Annually
-----------------------------	----------

Before replacing the battery the data logger must be stopped.

After removing an old battery from a logger, wait five minutes before inserting the new one.

Data stored on the logger will be retained after a battery is replaced.

If used at low temperatures the data logger should be allowed to warm to room temperature before it is opened to avoid condensation forming inside the unit.

Calibration

This unit is configured to meet Gemini's quoted specification during its manufacture.

We recommend that the calibration of this unit should be checked annually against a calibrated reference meter.

A certificate of calibration, traceable to a national standard, can be supplied for an additional charge either at the point of purchase, or if the unit is returned for a service calibration.

Approvals

Gemini Data Loggers (UK) Ltd. operates a Business Management System which conforms to ISO 9001 and ISO 14001.



Required and Related Products

To use this data logger you will require the following software:

SWCD-0040: Tinytag Explorer software

and a

CAB-0005-USB: Tinytag Transit/Talk USB Download Cable

The SWCD-0040 software and CAB-0005-USB cable can be ordered together in a pack using the part number SWPK-5-USB.

Further Related Products

SER-9500: Tinytag Data Logger Service Kit