

Submersible Galvanic Dissolved Oxygen Sensors



Large solution capacity for long term deployment

Models with and without temperature sensor

Easy installation and maintenance

mV or 4-20mA output models available

The DO6400 & 7400 series dissolved oxygen sensors feature a large capacity electrolyte holder, positive fit, easy to replace membrane and dependable galvanic cell technology for long term deployment. The body design ensures a good grip when wet. Ideal for Aquaculture and wastewater monitoring applications, these sensors require minimal maintenance. Teflon or High-Density Polyethylene (HDPE) membranes are available. 2 Replacement membranes, installation tool and electrolyte are included. Additional maintenance parts are in convenient kits (see ordering information). Sensors with mV output as well as built-in 4-20mA output in 0-100% and 0-200% saturation range are available.

Specifications

O₂ Measuring Range	DO6400, DO6400TC (0.5-20ppm), DO6441(0-100%), DO6442(0-200%) DO7400, DO7400TC (0.03-20ppm), DO7441(0-100%), DO7442(0-200%)
Body Material	Noryl
Cathode	Silver
Anode	Zinc (DO6400 Series), Lead (DO7400 Series)
Maximum Temperature	50 Degrees C
Power Requirement	12-36V DC (for models DO6441, DO6442, DO7441 and DO7442 only)
Temperature Sensor	(User specified temperature elements) Connect to your controller or PLC for temperature output
Cable length	10 feet, tinned leads
Minimum Flow rate	2 inches per second
Output @ Air Saturation	HDPE DO6400 & DO7400 (45mV +/- 9mV) Teflon DO6400 & DO7400 (33mV +/- 9mV) HDPE & Teflon DO6441, DO7441(0-100%) - fixed 4 - 4.5mA = <1 ppm DO HDPE & Teflon DO6441, DO7441 (0-100%)- fixed 18-22 mA = saturated air HDPE & Teflon DO6442- fixed 4 - 4.5mA = <1 ppm DO HDPE & Teflon DO6442- fixed 11-13 mA = saturated air

Parts covered by this product data sheet include:


DO6400/H, DO6400/T, DO6400TC/H, DO6400TC/T, DO6441/T, DO6442/T,
DO7400/H, DO7400/T, DO7400TC/H, DO7400TC/T, DO7441/T,

For pricing, or any further, information please contact us.
Tel: +44 (0)845 9000 601 or visit our website.


www.omniinstruments.co.uk

Submersible Galvanic Dissolved Oxygen Sensors

OUTLINE DRAWING AND DIMENSIONS FOR DO6400 and DO7400 SERIES SENSORS

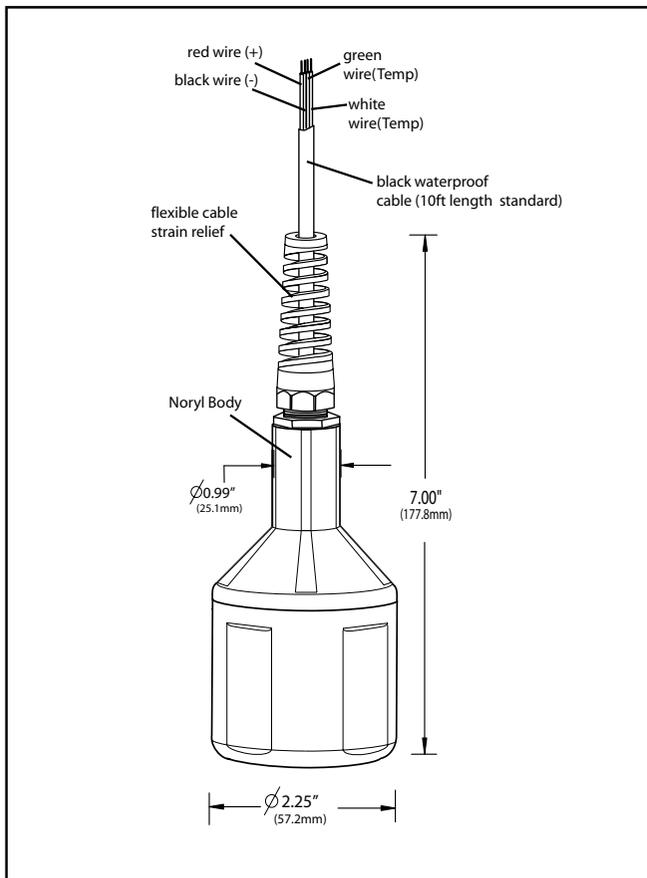

OUTLINE DRAWING AND DIMENSIONS FOR 4-20mA SERIES SENSORS

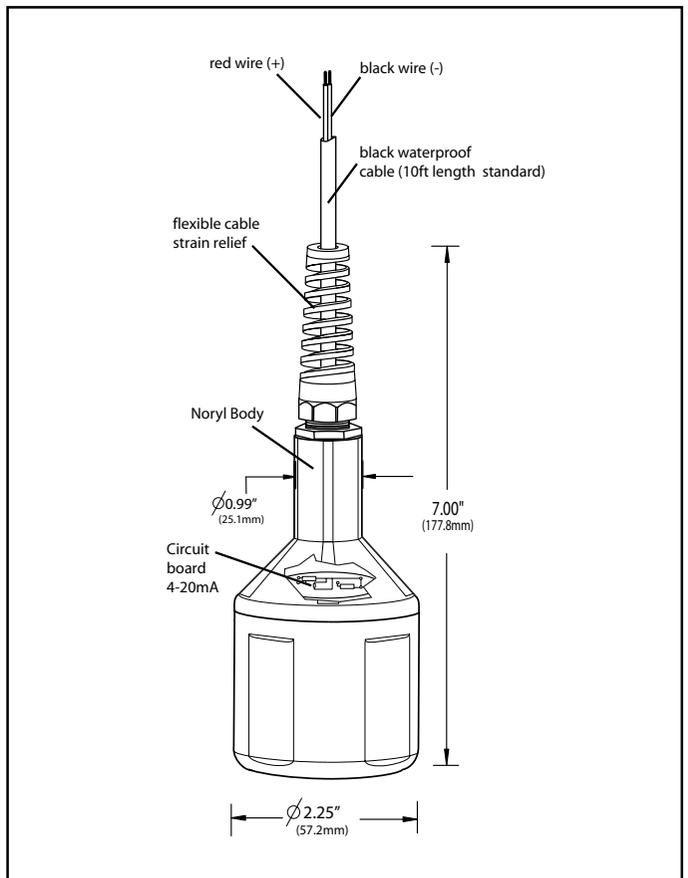

Submersible Galvanic Dissolved Oxygen Sensors

ORDERING INFORMATION

Sensors

Part No.	Description
DO6400/H	DO Sensor, HDPE Membrane
DO6400/T	DO Sensor, Teflon Membrane
DO6400TC/H	DO Sensor, HDPE Membrane, supplied with customer specified temperature element
DO6400TC/T	DO Sensor, Teflon Membrane, supplied with customer specified temperature element
DO6441/T	DO Sensor, Teflon Membrane, 4-20mA (0-100% sat.)
DO6442/T	DO Sensor, Teflon Membrane, 4-20mA (0-200% sat.)
DO7400/H	DO Sensor, HDPE Membrane (low range)
DO7400/T	DO Sensor, Teflon Membrane (low range)
DO7400TC/H	DO Sensor, HDPE Membrane, (low range) supplied with customer specified temperature element
DO7400TC/T	DO Sensor, Teflon Membrane, (low range) supplied with customer specified temperature element
DO7441/T	DO Sensor, Teflon Membrane, (low range) 4-20mA (0-100% sat.)
DO7442/T	DO Sensor, Teflon Membrane, (low range) 4-20mA (0-200% sat.)
Note: 1) All DO sensors are shipped dry with membrane preinstalled 2) All DO sensors are shipped with 2 membranes, 2 membrane O-rings, 1 membrane removal tool and 1 each 250mL of electrolyte (enough for about 4 refills).	

Accessories

Part No.	Description
DO6050/H	Membrane maintenance kit for DO6400 Series sensors 5 each HDPE membranes, 5 each membrane O-rings, 5 each tensioning washer, 1 bottle (250mL) electrolyte
DO6050/T	Membrane maintenance kit for DO6400 Series 5 each Teflon membranes, 5 each membrane O-rings, 5 each tensioning washer 1 bottle (250mL) electrolyte
DO6051/H	Membrane maintenance kit for DO6400 Series 25 each HDPE membranes, 25 each membrane O-rings, 25 each tensioning washer, 3 bottles (500mL ea) electrolyte
DO6051/T	Membrane maintenance kit for DO6400 Series 25 each Teflon membranes, 25 each membrane O-rings, 25 each tensioning washer, 3 bottles (500mL ea) electrolyte
DO6052	Spare Parts kit for DO6400 & DO7400 Series sensors. Contains: 2 each membrane lock, 2 each tensioning washer, 2 each body o-rings, 1 membrane replacement tool
DO7050/H	Membrane maintenance kit for DO7400 Series sensors 5 each HDPE membranes, 5 each membrane O-rings, 5 each tensioning washer, 1 bottle (250mL) electrolyte
DO7050/T	Membrane maintenance kit for DO7400 Series 5 each Teflon membranes, 5 each membrane O-rings, 5 each tensioning washer 1 bottle (250mL) electrolyte
DO7051/H	Membrane maintenance kit for DO7400 Series 25 each HDPE membranes, 25 each membrane O-rings, 25 each tensioning washer, 3 bottles (500mL ea) electrolyte
DO7051/T	Membrane maintenance kit for DO7400 Series 25 each Teflon membranes, 25 each membrane O-rings, 25 each tensioning washer, 3 bottles (500mL ea) electrolyte



For pricing, or any further, information please contact us.

Tel: +44 (0)845 9000 601 or visit our website.

www.omniinstruments.co.uk