

Submersible Hydrostatic Level Transmitter



UK
CA



WL420

WL420 has been designed for continuous liquid level monitoring in water wells, reservoirs, tanks, boreholes, rivers and other liquids.

The submersible unit measures the static pressure of the liquid column above the transmitter and transmits a current signal proportional to the water column to the instrumentation above.

The highly stable 316L stainless steel diaphragm sensor is fully compatible to raw or chlorinated water and most semi-aggressive liquids.

Supplied with a special vented cable to compensate the atmospheric pressure changes, it accurately transmits the measured liquid level. The application-dependent cable length can be defined at the time of purchase to the desired extent and can also be customer adapted at the application site.*

Several measurement ranges are available for a wide range of applications, allowing their use with local or remote panel meters, data loggers or PLCs.

*Under consultation



**PUR Vented
Cable**



**IP68
Rated**



**Rugged
Stainless Steel
Construction**



**High Accuracy
(0,5 % F.S.)**

For pricing or any further information, please contact Omni Instruments Ltd.



Measurement and data acquisition solutions


Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address: Unit 1, 14 Nobel Road,
Wester Gourdie Industrial Estate,
Dundee, DD2 4UH.

Application Examples

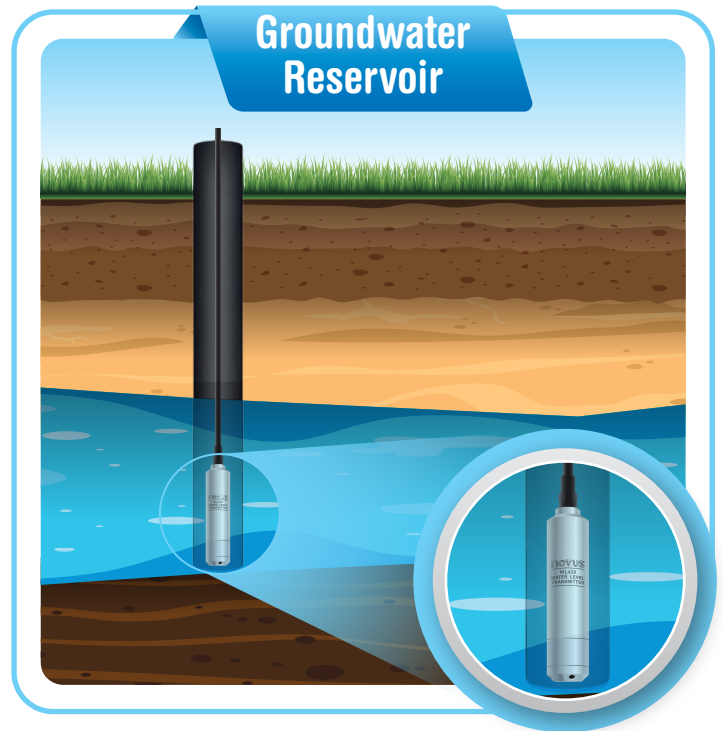

Technical Specifications

Measuring Ranges	1 ... 100 mH ₂ O (1, 1.6, 2.5, 4, 6, 10, 16, 25, 40, 60 and 100 mH ₂ O) 1.5 to ... 150 PSI (1.5, 2.4, 3.75, 6, 9, 15, 24, 37.5, 60, 90 and 150 PSI)
Cable Length	5 ... 120 m (5, 10, 15, 20, 30, 40, 50, 80, 120 m) 16.40 ... 393.70 ft (16.4, 32.8, 49.2, 65.6, 98.4, 131.2, 164, 262.5, 393.7 ft)
Sensor	Piezo-resistive diaphragm
Analog Output	4-20 mA
Accuracy	0.5% F.S. @25 °C (@ 77 °F)
Cable	PUR (Polyurethane) 2x conductors, shield and vent tube
Power Supply	4-20 mA loop-powered (12 - 36 Vdc)

Operating Conditions	0 to 60 °C (32 to 140 °F), range < 4 mH ₂ O (6 PSI) -10 to 70 °C (14 to 158 °F), range ≥ 4mH ₂ O (6 PSI)
Housing Material	Sensor - SS 316L Case - SS 304
Dimensions	Length: 105 mm (4.13 in) Diameter: 26.5 mm (1.04 in)
Ingress Protection	IP68
Overpressure Limit	≤60 mH ₂ O: 3x F.S. ≥10 mH ₂ O: 2x F.S.
Electrical Protection	Polarity inversion and current limiter
Approvals	CE, RoHS
Warranty	1 year

For pricing or any further information, please contact Omni Instruments Ltd.