

AP-5000

Advanced multiparameter water quality probe

The AP-5000 packages is our largest multiparameter portable water quality monitoring package. The AP-5000 allows you to add an increased number of sensors compared to the smaller AP-2000. Packages include an Aquaprobe, a GPS Aquameter, a 3 meter cable, accessories and some RapidCal calibration solution all housed in a neat carry case for easy storage and transport.

Build

All Aquaprobes are made with the same marine grade aluminium, finished in black with hard anodising for excellent corrosion and biofouling resistance. The use of metal, as opposed to plastic, gives our products their characteristic weight and high quality look and feel.

Sensors

The AP-5000 comes with all of the common water quality testing sensors pre fitted to the probe:

pH • ORP • Conductivity • TDS • SSG • Resistivity • Salinity
• Dissolved Oxygen • Depth • Temperature

Probes come with 4 empty sockets

The AP-5000 comes with four empty Aux sockets pre-fitted with removable blanking plugs. These sockets allow you to customise your probe by adding in additional sensors. Each socket can house either an Ion Selective Sensor (ISE) or any of our optical sensors



AP-5000 with two sockets exposed and two fitted with blanking plugs.

Socket Customisation Options

Aux port 1 -4 can be fitted with any ISE or optical sensor.

There are many different sensors to choose from to customise your probe:

ISE Electrode Options:


Ammonium / Ammonia,
Chloride,
Nitrate,
Fluoride,
Calcium.

Optical Electrode Options:

Turbidity,
Chlorophyll,
Blue Green Algae,
Rhodamine,
Fluorescein,
Refined Oil,
CDOM / FDOM.

Optical Dissolved Oxygen (DO) Sensor

The AP-5000 has a factory installed and fully calibrated optical DO sensor. The sensor requires much less maintenance than the galvanic version, gives more stable readings and requires cap changes only once every 2-3 years.

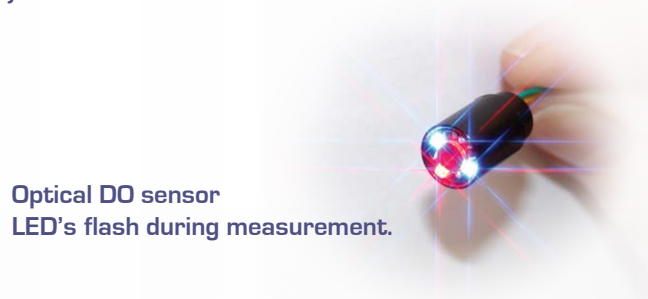

Optical DO sensor
LED's flash during measurement.

For pricing or any further information, please contact Omni Instruments Ltd.

AP-5000 Package

Package comes complete with Aquaprobe, GPS Aquameter, 3m cable, rugged case and accessories. Various cable lengths are available; 10, 20 and 30m as standard.



All cables 20m and over come on a winding reel making them much easier to operate, especially when profiling.

GPS Aquameter

The GPS Aquameter is a hand held device with a display for live data viewing and data recording. As one of our flagship products it is included in every Aquaprobe package. GPS coordinates are recorded everytime you take a reading. It is designed to be very simple to use and to make your job easier in the field.



AP-5000 Flowcell

The flowcell for the AP-5000 uses an adaptor that must first be fitted to the probe under the probe sleeve. A flow rate of 30 Litres/hour is ideal, recommended operating pressure is 500mB.

This eliminates air contact with pumped samples from groundwater boreholes allowing truly representative measurements to be obtained.




AquaLink

Our AquaLink software is free to download from our website's download section. Use this software to download recorded data from your Aquameter, for analysis, reporting and google map creation.

AquaLink Features

- Simple data download via button
- Tick and un-tick datasets to customise your outputs
- Output a text report for all highlighted data
- Output data as a CSV file that you can open in Excel
- Output data as a .KML file for use in Google Earth

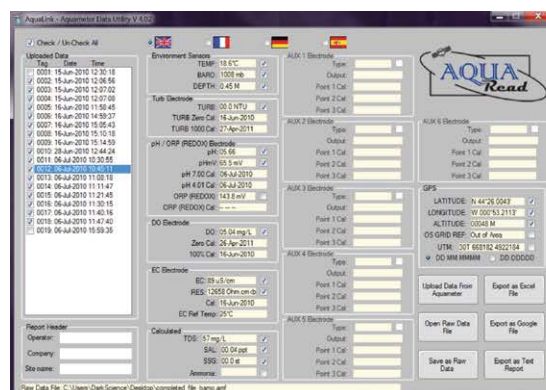

Specifications

Protection Class	IP68 (permanent immersion)
Immersion Depth	Min 75mm. Max 100m *
Operating Temperature	-5 °C - +70 °C
Dimensions (L x Dia)	340mm x 58mm
Weight	950g

* 100m submersion for period of 12 hours, 30m submersion suitable for permanent deployment, depth measurement displayed up to 60m on Aquameter.



Standard Parameters

Dissolved Oxygen	Range	0 - 500.0% / 0 - 50.00 mg/L
	Resolution	0.1% / 0.01mg/L
Depth AP-2000/ AP-5000	Accuracy	0 - 200%: $\pm 1\%$ of reading. 200% - 500%: $\pm 10\%$
	Range	$\pm 0 - 60.00$ m (60m max displayed depth, max probe immersion 100m)
Depth AP-7000	Resolution	1cm
	Accuracy	$\pm 0.5\%$ FS
Conductivity (EC)	Range	$\pm 0 - 99.99$ m
	Resolution	1cm
TDS *	Accuracy	$\pm 0.2\%$ FS
	Range	0 - 200 mS/cm (0 - 200,000 μ S/cm)
Resistivity *	Resolution	3 Auto-range scales: 0 - 9999 μ S/cm, 10.00 - 99.99 mS/cm, 100.0 - 200.0mS/cm
	Accuracy	$\pm 1\%$ of reading
Salinity *	Range	0 - 100,000 mg/L (ppm)
	Resolution	2 Auto-range scales: 0 - 9999mg/L, 10.00 - 100.00g/L
Seawater Specific Gravity *	Accuracy	$\pm 1\%$ of reading
	Range	5 $\Omega \cdot \text{cm} - 1 \text{ M}\Omega \cdot \text{cm}$
pH	Resolution	2 Auto-range scales: 5 - 9999 $\Omega \cdot \text{cm}$, 10.0 - 1000.0 K $\Omega \cdot \text{cm}$
	Accuracy	$\pm 1\%$ of reading
ORP	Range	0 - 70 PSU / 0 - 70.00 ppt (g/Kg)
	Resolution	0.01 PSU / 0.01 ppt
Temperature (non freezing)	Accuracy	$\pm 1\%$ of reading
	Range	0 - 14 pH / ± 625 mV
	Resolution	0.01 pH / ± 0.1 mV
	Accuracy	± 0.1 pH / ± 5 mV
	Range	± 2000 mV
	Resolution	0.1mV
	Accuracy	± 5 mV
	Range	-5°C - +50°C (23°F - 122°F)
	Resolution	0.01°C / 0.1°F
	Accuracy	± 0.1 °C

* Readings calculated from EC and temperature electrode values

ISE

Ammonium	Range	0 - 9,000mg/L (ppm)
	Resolution	2 Auto-range scales: 0.00 - 99.99 mg/L, 100.0 - 8,999.9 mg/L
Ammonia†	Accuracy	$\pm 10\%$ of reading or 2ppm (whichever is greater)
	Range	0 - 9,000mg/L (ppm)
Chloride	Resolution	2 Auto-range scales: 0.00 - 99.99 mg/L, 100.0 - 8,999.9 mg/L
	Accuracy	$\pm 10\%$ of reading or 2ppm (whichever is greater)
Fluoride	Range	0 - 20,000mg/L (ppm)
	Resolution	2 Auto-range scales: 0.00 - 99.99 mg/L, 100.0 - 9,999.9 mg/L
Nitrate	Accuracy	$\pm 10\%$ of reading or 2ppm (whichever is greater)
	Range	0 - 1,000mg/L (ppm)
Calcium	Resolution	2 Auto-range scales: 0.00 - 99.99 mg/L, 100.0 - 29,999.9 mg/L
	Accuracy	$\pm 10\%$ of reading or 2ppm (whichever is greater)
	Range	0 - 30,000mg/L (ppm)
	Resolution	2 Auto-range scales: 0.00 - 99.99 mg/L, 100.0 - 29,999.9 mg/L
	Accuracy	$\pm 10\%$ of reading or 2ppm (whichever is greater)
	Range	0 - 2,000mg/L (ppm)
	Resolution	2 Auto-range scales: 0.00 - 99.99 mg/L, 100.0 - 1,999.9 mg/L
	Accuracy	$\pm 10\%$ of reading or 2ppm (whichever is greater)

† Ammonium electrode required. Readings calculated from ammonium, pH and temperature values.

Optical

Turbidity	Range	0 - 4000 NTU
	Resolution	2 Auto-range scales: 0.0 - 99.9 NTU, 100 - 4000 NTU
Chlorophyll	Accuracy	$\pm 5\%$ of auto-ranged scale
	Range	0 - 500.0 μ g/L (ppb)
Phycocyanin (freshwater BGA)	Resolution	2 Auto-range scales: 0.00 - 99.99 μ g/L, 100.0 - 500.0 μ g/L
	Repeatability	$\pm 5\%$ of reading
Phycerythrin (marine BGA)	Range	0 - 300,000 cells/mL
	Resolution	1 cell/mL
Rhodamine WT Dye	Repeatability	$\pm 10\%$ of reading
	Range	200,000 cells/mL
Fluorescein Dye	Resolution	1 cell/mL
	Repeatability	$\pm 10\%$ of reading
Refined Oil	Range	0 - 500 μ g/L (ppb)
	Resolution	2 Auto-range scales: 0.00 - 99.99 μ g/L, 100.0 - 500.0 μ g/L
CDOM / FDOM	Accuracy	$\pm 5\%$ of reading
	Range	0 - 500 μ g/L (ppb)
	Resolution	2 Auto-range scales: 0.00 - 99.99 μ g/L, 100.0 - 500.0 μ g/L
	Accuracy	$\pm 5\%$ of reading
	Range	0 - 10,000 μ g/L (ppb) (Napthalene)
	Resolution	0.1 μ g/L
	Repeatability	$\pm 10\%$ of reading
	Range	0 - 20,000 μ g/L (ppb) (Quinine Sulphate)
	Resolution	2 Auto-range scales: 0.0 - 9,999.9 μ g/L, 10,000 - 20,000 μ g/L
	Repeatability	$\pm 10\%$ of reading

The accuracy figures quoted throughout this document represent the equipment's capability at the calibration points at 25°C. These figures do not take into account errors introduced by variations in the accuracy of calibration solutions and errors beyond the control of the manufacturer that may be introduced by environmental conditions in the field. Accuracy in the field is also dependent upon full calibration and minimal time between calibration and use.