



2-wire programmable RTD transmitter

5332A

- RTD or Ohm input
- Accuracy: Better than 0.05% of selected range
- Programmable sensor error value
- For DIN form B sensor head mounting



Application

- Linearized temperature measurement with Pt100...Pt1000 or Ni100...Ni1000 sensor.
- Conversion of linear resistance variation to a standard analog current signal, for instance from valves or Ohmic level sensors.


Technical characteristics

- Within a few seconds the user can program PR5332A to measure temperatures within all ranges defined by the norms.
- Dedicated programmable non-isolated 4-wire RTD transmitter.
- RTD and resistance inputs have cable compensation for 2-, 3- and 4-wire connection.
- Continuous check of vital stored data for safety reasons.

Mounting / installation

- For DIN form B sensor head or DIN rail mounting with the PR fitting type 8421.

Applications

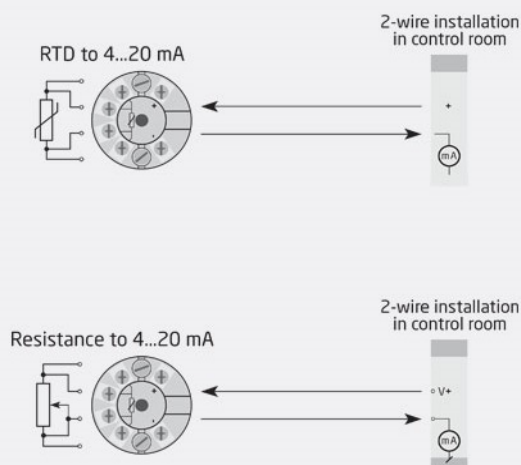

For pricing or any further information, please contact Omni Instruments Ltd.

Order

Type	Version
5332	Simple, no approvals : N General purpose, Zone 2, ATEX, IECEx : A

Environmental Conditions

Operating temperature.....	-40°C to +85°C
Calibration temperature.....	20...28°C
Relative humidity.....	< 95% RH (non-cond.)
Protection degree (encl./terminal).....	IP68 / IP00

Mechanical specifications

Dimensions.....	Ø 44 x 20.2 mm
Weight approx.....	50 g
Wire size.....	1 x 1.5 mm ² stranded wire
Screw terminal torque.....	0.4 Nm

Common specifications

Supply	
Supply voltage.....	7.2...35 VDC
Internal power dissipation.....	25 mW...0.8 W
Response time	
Response time (programmable).....	1...60 s
Voltage drop.....	7.2 VDC
Warm-up time.....	5 min.
Power on to stable output.....	4.5 s
Programming.....	Loop Link
Signal / noise ratio.....	> 60 dB
EEProm error check.....	< 3.5 s
Accuracy.....	Better than 0.05% of selected range
Signal dynamics, input.....	20 bit
Signal dynamics, output.....	16 bit
Effect of supply voltage change.....	< 0.005% of span / VDC
EMC immunity influence.....	< ±0.5% of span
Extended EMC immunity: NAMUR NE21, A criterion, burst.....	< ±1% of span

Input specifications

Common input specifications	
Max. offset.....	50% of selected max. value

RTD input

RTD type.....	Pt100, Ni100, lin. R
Cable resistance per wire.....	5 Ω (max.)
Sensor current.....	Nom. 0.2 mA
Effect of sensor cable resistance (3-/4-wire).....	< 0.002 Ω / Ω
Sensor error detection.....	Yes

Linear resistance input

Linear resistance min....max.....	0 Ω...5000 Ω
-----------------------------------	--------------

Output specifications

Common output specifications

Updating time.....	440 ms
Current output	
Signal range.....	4...20 mA
Min. signal range.....	16 mA
Load (@ current output).....	≤ (Vsupply - 7.2) / 0.023 [Ω]
Load stability.....	≤ 0.01% of span / 100 Ω
Sensor error indication.....	Programmable 3.5...23 mA
NAMUR NE43 Upscale/Downscale.....	23 mA / 3.5 mA
of span.....	= of the presently selected range

I.S. / Ex marking

ATEX.....	II 3 G Ex nA [ic] IIC T6...T4 Gc, II 3 G Ex ec [ic] IIC T6...T4 Gc, II 3 G Ex ic IIC T6...T4 Gc, II 3 D Ex ic IIIC Dc
IECEx.....	Ex nA [ic] IIC T6...T4 Gc, Ex ec [ic] IIC T6...T4 Gc, Ex ic IIC T6...T4 Gc, Ex ic IIIC Dc
CSA.....	Cl. I, Div. 2, Gp. A, B, C, D T6...T4, Ex nA[ic] IIC T6...T4 Gc
INMETRO.....	Ex ec [ic] IIC T6...T4 Gc, Ex ic IIC T6...T4 Gc, Ex ic IIIC Dc

Observed authority requirements

EMC.....	2014/30/EU & UK SI 2016/1091
ATEX.....	2014/34/EU & UK SI 2016/1107
RoHS.....	2011/65/EU & UK SI 2012/3032
EAC.....	TR-CU 020/2011
EAC Ex.....	TR-CU 012/2011

Approvals

ATEX.....	DEKRA 20ATEX0096X
IECEx.....	DEK 20.0059X
CSA.....	1125003
INMETRO.....	DEKRA 23.0009X
EAC Ex.....	EAEU KZ 7500361.01.01.08756

For pricing or any further information, please contact Omni Instruments Ltd.

Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address:

Unit 1, 14 Nobel Road,
Wester Gourdie Industrial Estate,
Dundee, DD2 4UH.