



#### Description:

The Terwin 2000 series transducers have been designed to meet the most exacting requirements in modern day extrusion technology. Fitted with the unique Di-Hard™ diaphragms, these transducers are suitable for extrudate temperatures up to 450°C / 842°F and are resilient against attack from most abrasive or corrosive products.

The 2000 series incorporates unequalled mechanical and electrical design features to overcome the problems of large zero and span shifts caused by changes in process temperatures. This has only been obtainable in the past with transducers that utilise a liquid filled system incorporating substances such as Mercury or Sodium Potassium. All Terwin 2000 series transducers are constructed throughout from stainless steel and DO NOT employ any toxic substances, thus allowing them to be used on machines involved in the process of food, film or pharmaceutical products.

When it is required to measure temperature as well as pressure, the 2000 series is available with type “J” or “K” integral thermocouples. Standard thermocouples have grounded junctions.


The 2000 series is also available with a variety of head and connection / calibration types.

#### Advantages:

- ✓ Accuracy  $\pm 0.5\%$  (typically  $\pm 0.25\%$ ).
- ✓ 4 x thicker Di-Hard™ abrasion / corrosion resistant diaphragm.
- ✓ Stainless steel construction throughout.
- ✓ Compatible with food, film and pharmaceutical applications.
- ✓ DOES NOT contain Mercury, NaK (sodium Potassium) or any other toxic product to contaminate the extrudate.
- ✓ Compliant with EN50082 part 1 and EN55022-1987 class A.
- ✓ Protected by UK patent No. 2,153,538 USA patent No. 4,625,559 and European patent No. 0156081.
- ✓ Suitable for extrudate temperatures up to 450°C / 842°F.
- ✓ Interchangeable with most other brands.

For pricing or any further information, please contact Omni Instruments Ltd.




**Stem length options:**

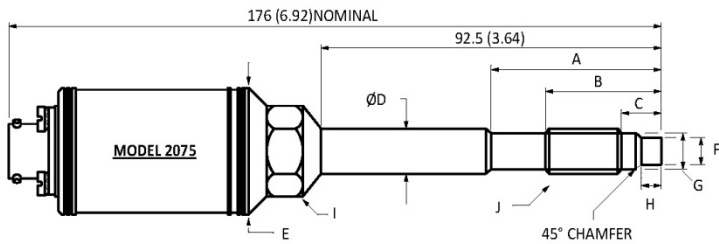




mm (INCHES)	DIMENSION
47 (1.85)	A
31.3 (1.23)	B
12.2 (0.48)	C
12.7 (0.50)	D
35.0 (1.38)	E
7.77±0.03 (0.306±0.001)	F
10.49±0.03 (0.413±0.001)	G
5.54±0.12 (0.218±0.005)	H
22 A/F	I
1/2-20-UNF-2A	J

**PLEASE NOTE:**

A to J dimensions are common  
to all standard models listed.

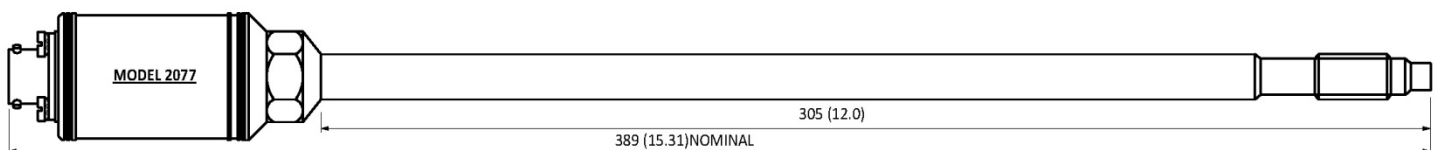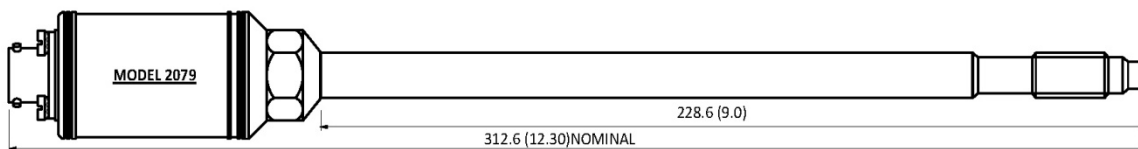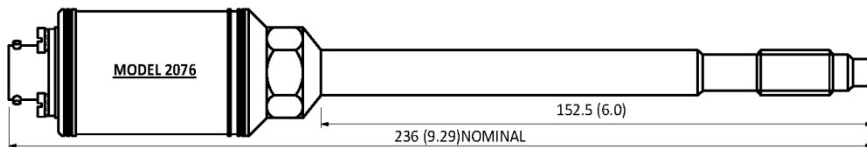

**Head options:**

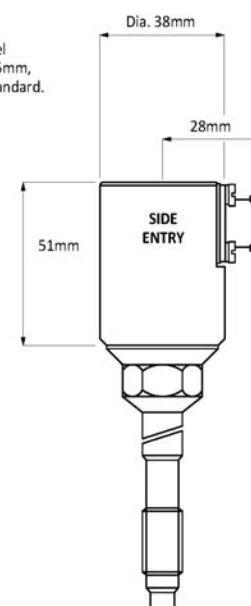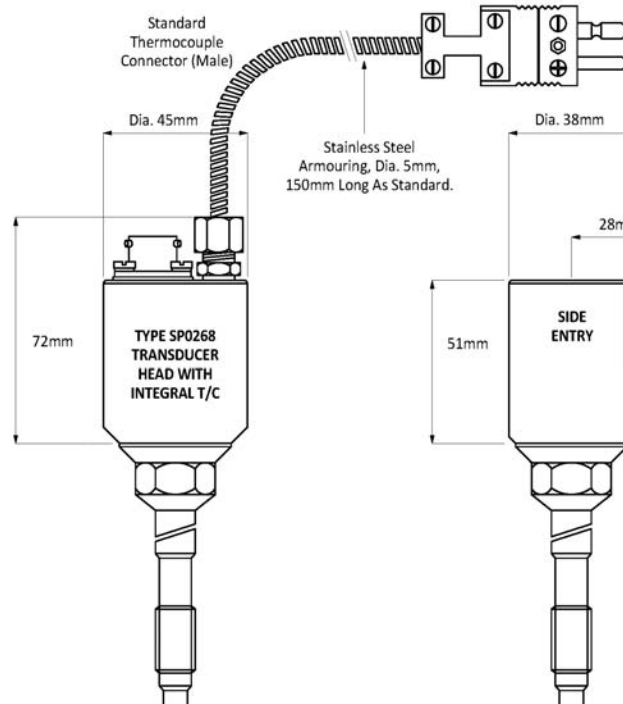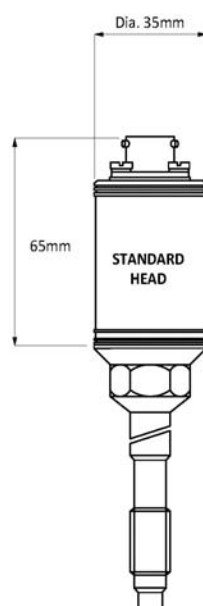

For pricing or any further information, please contact Omni Instruments Ltd.

**Contact Details:**

Tel: +44 1382 443000  
Email: [info@omni.uk.com](mailto:info@omni.uk.com)

Website: [www.omniinstruments.co.uk](http://www.omniinstruments.co.uk)


**Mailing Address:** Unit 1, 14 Nobel Road,  
Wester Gourdie Industrial Estate,  
Dundee, DD2 4UH.

## Specifications

Standard Pressure Ranges:	psi	0-1,500	0-3,000	0-5,000	0-7,500	0-10,000	0-15,000
	bar	0-100	0-200	0-350	0-500	0-700	0-1,000
Available Pressure Ranges	psi			0-500 thru to 0-30,000			
	bar			0-35 thru to 0-2,000			
Combined Error	Standard ranges:			Non-standard ranges:			
	Within ±0.5%. F.R.O. (Typically ±0.25%)			Within ±1%. F.R.O. (Typically ±0.5%)			
Repeatability	Within ±0.1% F.R.O.						
Resolution	Infinite						
Maximum Pressure:	2 x full range or 25,000psi (1,700 bar) which ever is less.						
	On 30,000psi (2,000bar) sensors, the maximum pressure is 35,000psi (2,400 bar).						
Body Material	17-4PH Stainless steel.						
Diaphragm Material	Terwin <b>Di-Hard™</b> Extra Thick, Abrasion / Corrosion Resistant Long Life Diaphragm						
Optional Diaphragm Coatings	Titanium Nitride (TN)		Hastelloy C276 (H)		Double Chromium Nitride (DCN)		
	Additional anti-abrasion resistance and to prevent thread galling.		Additional anti-corrosion resistance.		Out performs TN and H coatings in most applications.		
Mounting Torque	20ft lbs (27Nm) (240 inch/lbs)						
Standard Thread Size	1/2"-20UNF-2A						
Available Thread Size Adaptor	M18 x 1.5mm						
Electrical Specifications							
Excitation	5-12V D.C.						
Configuration	Four-arm bonded foil Wheatstone bridge strain gauge						
Bridge Resistance	350Ω ±10%						
Output	3.0mV/V D.C. ±10%						
Zero Balance	±5% F.R.O.						
Internal Negative Shunt Calibration	6-wire 80% F.S.O. ±0.1% - Other calibration types are available.						
Electrical Connectors	6-Pin (D6) PT02A-10-6P	8-Pin (D8) PT02E-12-8P	9-Pin (D9)	12-Pin (D12)	Cannon 6-Pin (G) (Gentran)	Cannon 6-Pin (BC) (Barber Coleman)	½"-NPT direct cable outlet
Integral Temperature Sensors	"J" I/C				"K" C/A		
Maximum Diaphragm Temperature	450°C / 842°F						
Maximum Strain Gauge Temperature	200°C / 392°F						
Zero Shift Due To Temperature Change	<0.01% F.S.O./°C or <0.02% F.S.O./°F						
Span Shift Due To Temperature Change	<0.01% F.S.O./°C or <0.02% F.S.O./°F						


For pricing or any further information, please contact Omni Instruments Ltd.

**Recommended Port Dimensions for 1/2"-20UNF Threaded Transducers:**

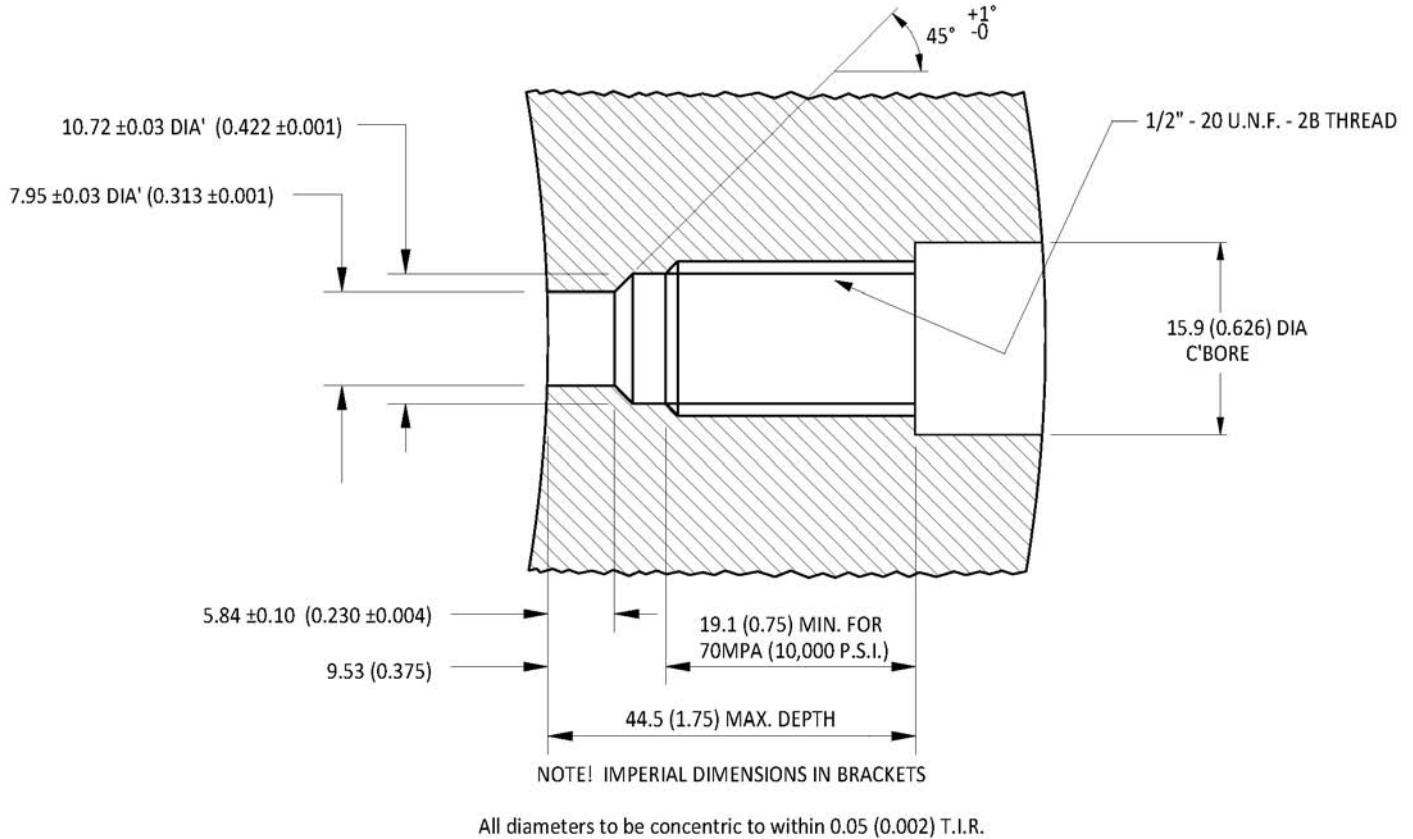


**Terwin 2000 Series Standard Wiring Connections:**

"D6" PRESSURE TRANSDUCER

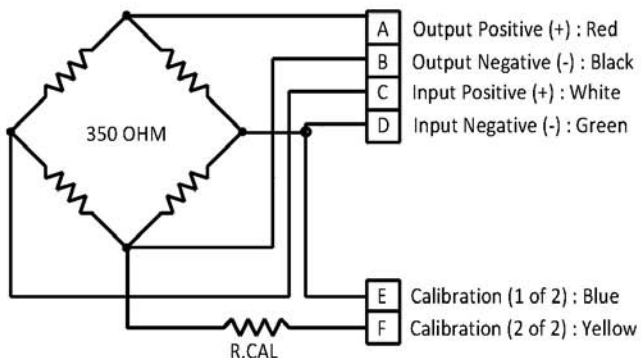

"D8" PRESSURE / TEMPERATURE TRANSDUCER

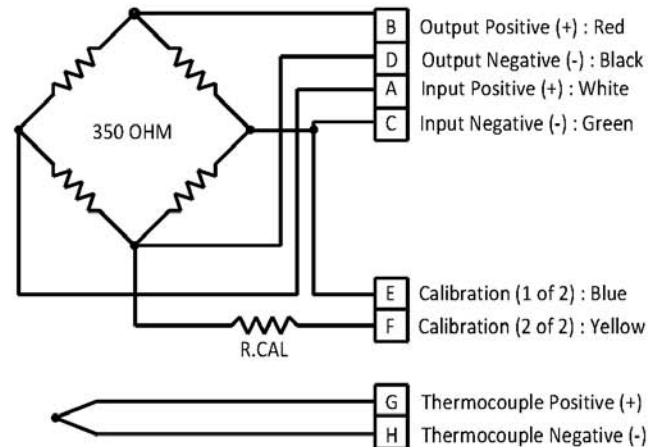

For pricing or any further information, please contact Omni Instruments Ltd.