



SRP-N118



SRP-N1186



IR remote controller SIR-25

SRP-N118 / SRP-N1186

- process meter in wall-mounted IP 67 case
- input: 0/4-20 mA, 0/1-5V, 0/2-10V
- 0 or 2 relay / OC outputs
- analogue output: active or passive (option)
- power supply output: 24V DC
- RS-485 / Modbus RTU
- free configuration software S-Config New
- pumps control function - Alternating Relays*

The SRP-N118(6) meter is designed for measuring of typical current or voltage signals. The readouts are presented on well-readable display with standard range of four digits or five/six digits for more demanding applications (e.g. measurement range: 4 - 20 mA, indications range: 0 - 20 000 kg). Thanks to the tight housing with high (IP 67) protection degree, this device is particularly suitable for operations in harsh environments. Wide range of characteristic curves (linear, square root, quadratic, user-defined and volume characteristic for cylindrical tanks) allows the use of meters in various process control systems. The 24V DC / 100mA output is designed to supply measuring transducers, and the RS-485 port enables data transmission in production process monitoring systems. The relay / OC control outputs can adjust the level of measured signal and are controlled according to one or two threshold values. Moreover, the meter can be equipped with analogue outputs, according to the customer selection: active current output, passive isolated current output or active voltage output. The new function, alternating relays*, enables automatic switching of outputs, which is used, among other things, to control the operation of two pumps alternately. The meter may be configured with no need to open the case, by using the remote controller or with free S-Config software via the RS-485 communication port.

* available only in SRP-N118

TECHNICAL DATA

Power supply	19V ÷ 50V DC; 16V ÷ 35V AC or 85 ÷ 260V AC/DC or 12V AC/DC, all separated
Power consumption	for 12V AC/DC, 85 ÷ 260V AC/DC and 16V ÷ 35V AC power supply: max. 5 VA; for 19V ÷ 50V DC power supply: max. 5 W
Display	LED, 4 x 20 mm or 6 x 13 mm high, red or green (option), brightness adjustable in 8 steps
Displayed values	-999 ÷ 9999 or -99999 ÷ 999999 + decimal point
Input	<u>current</u> : 0-20 mA or 4-20 mA, programmable, input resistance < 65 Ω (typ. 55 Ω), overload-protected, input current limited to 40 mA; <u>voltage</u> : 0-5 V, 1-5V, 0-10V or 2-10V, programmable, input resistance > 50 kΩ
Accuracy	0.1% @ 25°C ± one digit
Stability	50 ppm/°C
Binary outputs	0 or 2 x relay (REL) NO 5A/250V AC (resistance), 3A/250V AC (reactance) or OC I _{max} =30mA, U _{max} =30VDC, P _{max} =100mW
Analogue output (available with 1 x relay or OC, see ordering)	<u>active current</u> : operating range 0/4-20 mA (max. 0-24 mA), load resistance 700 Ω max., resolution 13 bit <u>passive current</u> : isolated, operating range 4-20 mA (max. 2.8-24 mA), load resistance 600 Ω @ 24VDC, resolution 13 bit <u>active voltage</u> : operating range 0/1-5V, 0/2-10V (max. 0-11V), load resistance min. 2000 Ω, resolution 13 bit
Power supply output	24V DC +5%, -10% / max. 100mA, stabilized
Communication interface	RS-485, 8N1 and 8N2, 1200 bit/s ÷ 115200 bit/s, Modbus RTU (not galvanically isolated)
Operating temp.	0°C ÷ +50°C (standard), -20°C ÷ +50°C (option)
Storage temp.	-10°C ÷ +70°C (standard), -20°C ÷ +70°C (depending on option)
Protection class	IP 67
Case	wall mounting; material: ABS + PC or 100% PC
Glands	M12, cable diameter 3 ÷ 6,5 mm
Dimensions (WxHxD)	without glands: 110 x 80 x 67 mm; with glands: 110 x 105 x 67 mm
Weight	max. 350g



Measurement and data acquisition solutions

Contact Details:

Tel: +44 1382 443000

Email: info@omni.uk.com

Website: www.omniinstruments.co.uk


Mailing Address:

Unit 1, 14 Nobel Road,


Wester Gourdie Industrial Estate,

Dundee, DD2 4UH.


DIMENSIONS

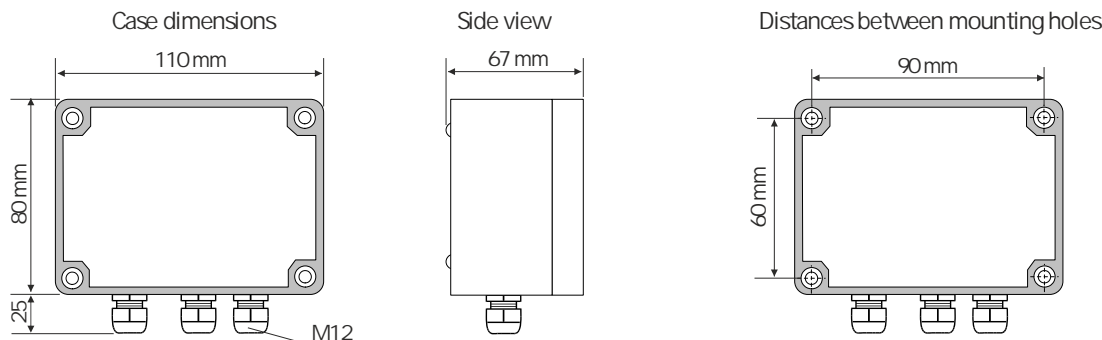


EXAMPLARY PIN ASSIGNMENTS

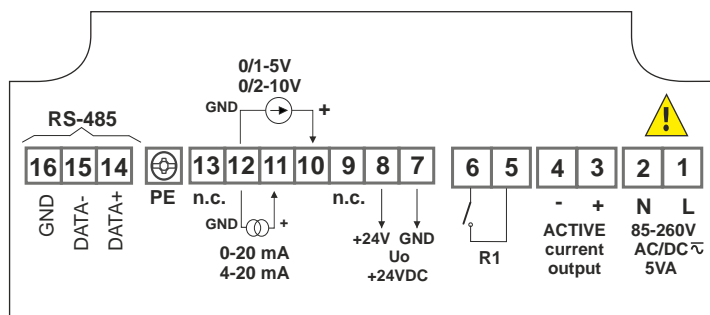


version with 1 x REL and 1 x AO 0/4-20mA, active

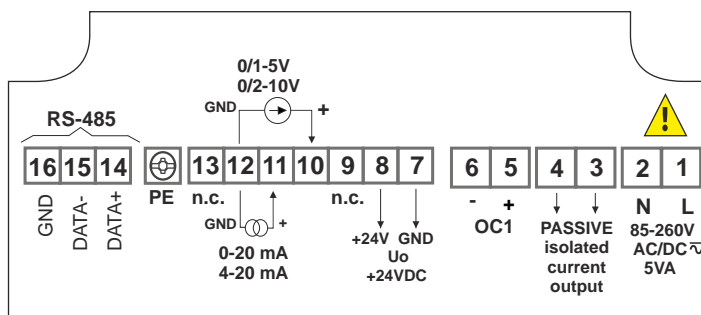

version with 1 x OC and 1 x AO 4-20mA, passive

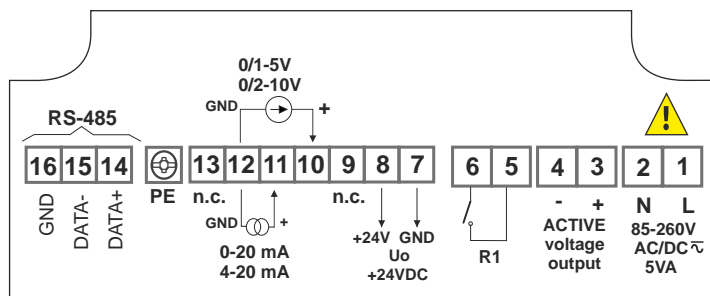

version with 1 x REL and 1 x AO 0/1-5V, 0/2-10V, active

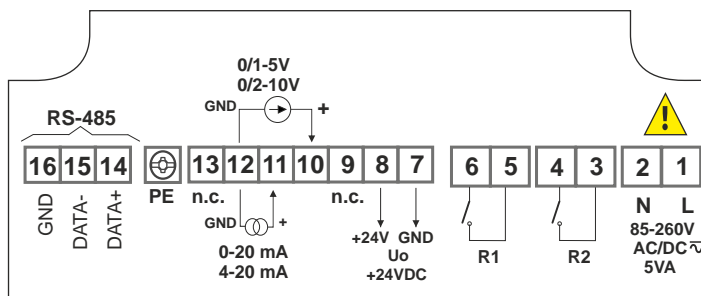

version with 2 x REL

ORDERING

SRP-X-18XX-1-X-XX1

display:

N118: 4-digits
 N1186: 6-digits

type of outputs:

OO: no output
 21: 2 x REL
 22: 2 x OC
 23: 1 x REL + 1 x AO (0/4-20mA, active, non-isolated)
 24: 1 x OC + 1 x AO (0/4-20mA, active, non-isolated)
 29: 1 x REL + 1 x AO (4-20mA, passive, isolated)
 2A: 1 x OC + 1 x AO (4-20mA, passive, isolated)
 2B: 1 x REL + 1 x AO (0/1-5V, 0/2-10V, active, non-isolated)
 2C: 1 x OC + 1 x AO (0/1-5V, 0/2-10V, active, non-isolated)

options:

OO: no options
 O3: green colour LED display
 O8: operating temp. -20°C ÷ +50°C
 OL: green colour LED display + operating temp. -20°C ÷ +50°C

power supply:

3: 24V AC/DC
 4: 85V ÷ 260V AC/DC
 5: 12V AC/DC

For pricing or any further information, please contact Omni Instruments Ltd.

Contact Details:

Tel: +44 1382 443000
 Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address:

Unit 1, 14 Nobel Road,
 Wester Gourdie Industrial Estate,
 Dundee, DD2 4UH.


REMOTE CONTROLLER



The SIR-25 infraRed remote control may be used as external programming keyboard for all SIMEX devices equipped with IR receivers and remote programming functions. Pressing of any local IR controller key, causes transmission of it's code to the device. The remote control features a five-button keyboard, including the F/ /RESET function button dedicated to the operation of the devices in the following group: counters, flow meters, and tachometers. Functions of particular keys depend on devices features.


Power supply voltage: 3V DC - 1 lithium battery CR2032 type
 Operation range: from 0,5 to 5 m (depend on programmed device features)

SOFTWARE

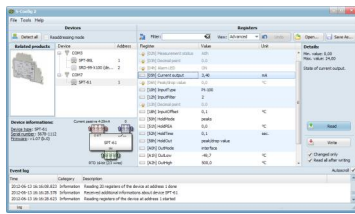

S-Config 2 is used for the simultaneous detection of devices in multiple Modbus RTU networks and allows user to change the configuration of most of them. For each detected device a list of its registers, which the user can modify, is displayed and also additional informations about device parameters (type, address in the network, etc.).

S-Config software can be downloaded from SIMEX website at www.simex.pl

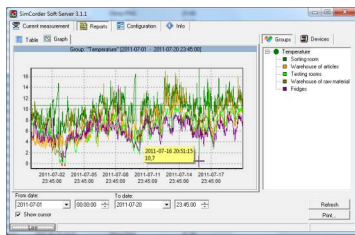

SimCorder Soft is a visualisation application created to facilitate work with advanced networks of the SIMEX devices, for acquisition, visualisation, reporting, archiving, exporting and printing of measurement data from all network devices. You can download measurements from the devices automatically or on demand. There is a possibility of immediate notification about emergency states via SMS or e-mail, which will often allow to quickly resolve an arising problem while avoiding long and expensive stoppages. You can view the measurement data, emergency states and configuration via the internet at every time.

CONVERTERS



The SRS-U4 converter is designed to connect a USB host to slave devices equipped with RS-485 interface. The PC with special software can be used as a host. The SRS-U4 unit guarantees full galvanic isolation between USB and RS-485 circuits. The converter can work with any devices equipped with RS-485 interface and contains integrated circuit which supports USB 1.1 and USB 2.0 standards. The main purpose is connection of PC host computer with industrial data acquisition and visualisation systems based on RS-485 interface.

The SRS-U4 can be also manufactured with DIN mounting adaptor.

For pricing or any further information, please contact Omni Instruments Ltd.