

Loop-powered LCD indicator

5531A



- 4 digit 1/8 DIN (48 x 96 mm) loop-powered LCD display
- Easy push-button configuration
- Backlit LCD display is readable in low light conditions
- Display can be mounted in the safe area or in I.S. / Ex zone 2



Application

- The 5531A indicator is powered by the 4 to 20 mA current loop and is easily scaled to display the correct process value.
- Because it does not require separate power wiring, the 5531A is perfect for remote display of process loops.
- The 5531A display can be panel mounted in the safe area or I.S. / Ex Zone 2 (gas).

Technical characteristics



- With a full measurement range of 3.6 to 23 mA, the 5531A is NAMUR NE43 compliant.
- The display can be push-button scaled to any range between -9999 to 9999, and reverse display action is possible.
- The LCD backlight can be set to half or full intensity for easy viewing in low light conditions.
- The display only requires 1.5 VDC, (75 Ω loop load), with the backlight turned off.
- The input is HART transparent.
- The front push-buttons can be disabled to prevent unauthorized adjustment.

Mounting / installation

- Once panel mounted with the included gasket, the 5531A provides IP65 ingress protection.

Applications

Input signal:

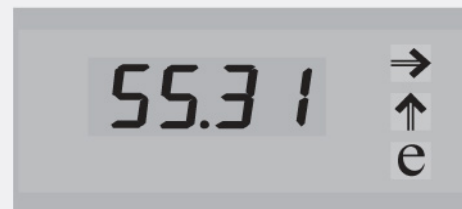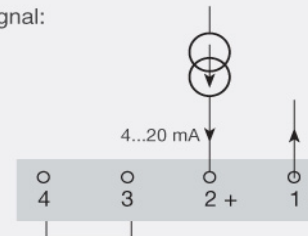

Order

Type	Version
5531A	Zone 2

Environmental Conditions

Operating temperature.....	-20°C to +60°C
Storage temperature.....	-20°C to +60°C
Calibration temperature.....	20...28°C
Relative humidity.....	< 95% RH (non-cond.)
Protection degree.....	IP65, from front

Mechanical specifications

Dimensions (HxWxD).....	48 x 96 x 120 mm
Cut out dimensions.....	44.5 x 91.5 mm
Weight approx.....	200 g
Wire size, connector terminal	
1 - 4.....	0.13...2.08 mm ² / AWG 26...14 stranded wire
Screw terminal torque.....	0.5 Nm

Common specifications

Supply

Supply voltage.....	Input loop-powered
---------------------	--------------------

Response time

Response time (0...90%, 100...10%).....	< 1 s
Programming.....	Front-programmable
Signal / noise ratio.....	> 60 dB
Updating time.....	500 ms
EMC immunity influence.....	< ±0.5% of span

Input specifications

Current input

Loop error detection, 4...20	
mA: Low.....	~ < 3 mA
Loop error detection, 4...20	
mA: High.....	~ > 24 mA
Input range.....	4...20 mA
Measurement range.....	3.6...23 mA
Input voltage drop, without	
backlight.....	< 1.5 V @ 20 mA
Input voltage drop, with half	
backlight.....	< 6.5 V @ 20 mA
Input voltage drop, with full	
backlight.....	< 10.5 V @ 20 mA

Output specifications

Display

Display readout.....	± 9999 (4 digits)
Digit height.....	16 mm

Observed authority requirements

EMC.....	2014/30/EU
ATEX.....	2014/34/EU
RoHS.....	2011/65/EU
EAC.....	TR-CU 020/2011
EAC LVD.....	TR-CU 004/2011

Approvals

ATEX.....	KEMA 05ATEX1044X
IECEx.....	DEK 24.0002X
CCC.....	2024322309006239

For pricing or any further information, please contact Omni Instruments Ltd.



Measurement and data acquisition solutions

Contact Details:

Tel: +44 1382 443000
Email: info@omni.uk.com

Website: www.omniinstruments.co.uk

Mailing Address: Unit 1, 14 Nobel Road,
Wester Gourdie Industrial Estate,
Dundee, DD2 4UH.